


Hinged From Wall Bathscreen

KLB / TLB

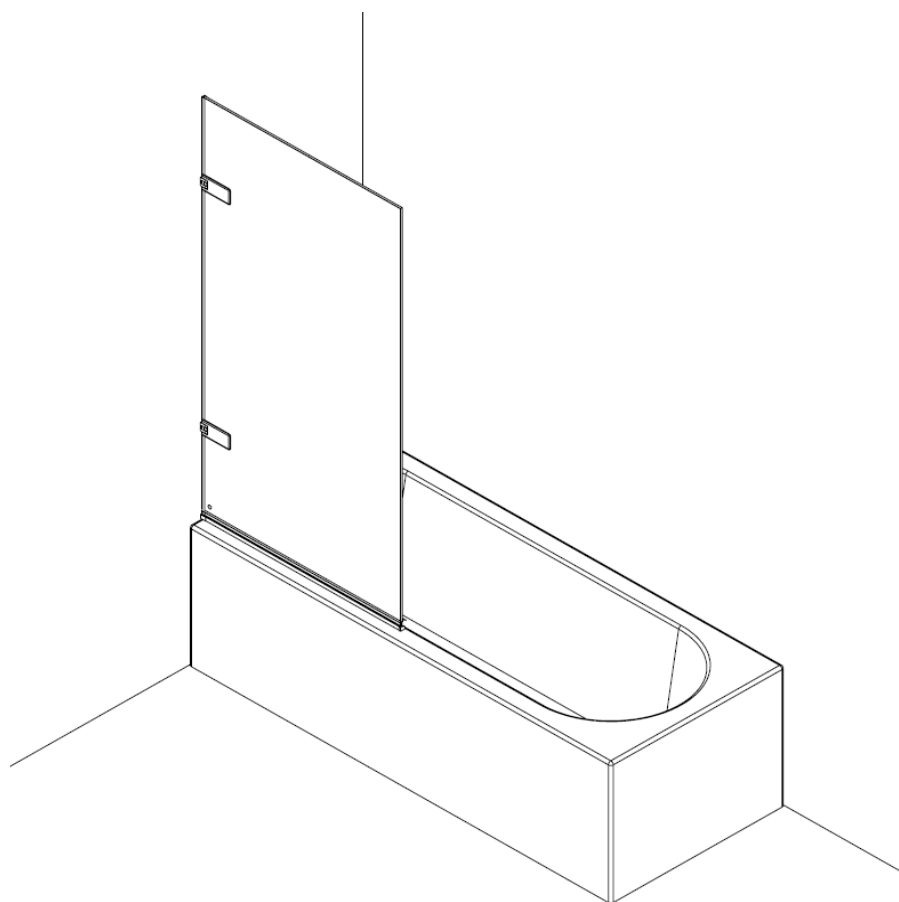

Handling

Be aware toughened glass can shatter if not handled correctly. It should not be subjected to any sharp impact and it is essential to protect the glass by resting it on a soft protective surface during installation such as cardboard or carpeting. It is recommended to wear PPE at all times during installation.




Pre-Installation Checks

1. Please take time to read these instructions prior to installing your product, including the Tray Sizes section below.
2. Check you have the correct product, by looking at the labels on the side of the product packaging.
3. Check all the product components and fixing kits are in the box - these are listed on the next page.
4. Please check the product for defects or damage, once the installation has commenced we cannot accept responsibility for any defects or damage.
5. Before you commence any drilling check there are no hidden electrical cables and/or water pipes.
6. No attempt should be made to re-work the toughened safety glass.
7. The installation of the product should be performed by two persons.
8. It is strongly recommended the product is fitted on a tiled surface or similar waterproof surface - which are tiled and grouted before product is installed.
9. It is strongly recommended that the walls the product is going to be installed on are vertical, and the floor/tray is level.
10. Pictures used are for illustration purposes only, product designs may alter slightly as a result of continuing product development.
11. We do not stipulate where the European Standard Kite Mark should be positioned on the glass when being factory assembled.
12. Please note that some natural misting may occur when you remove this product from its packaging, due to the addition of the glass protection pre-coating. If this does occur this can easily be removed with a soft, dry cloth.


Consumer Guarantee

Please make sure the purchaser/end user completes and returns the guarantee card which is enclosed with this product. Failure to validate the Guarantee will mean only the 1 Year Statutory Guarantee will apply.


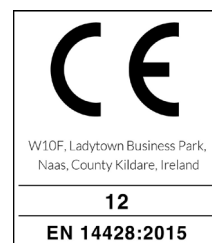


REV03 - 10.2025

Equipment Checklist: Not Supplied


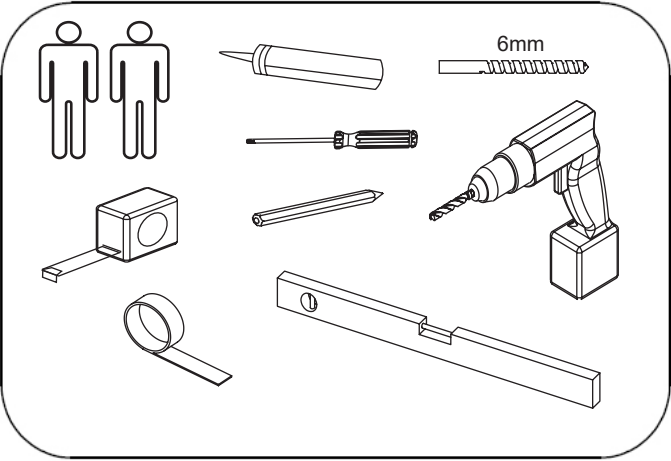


Fixing Kit Components

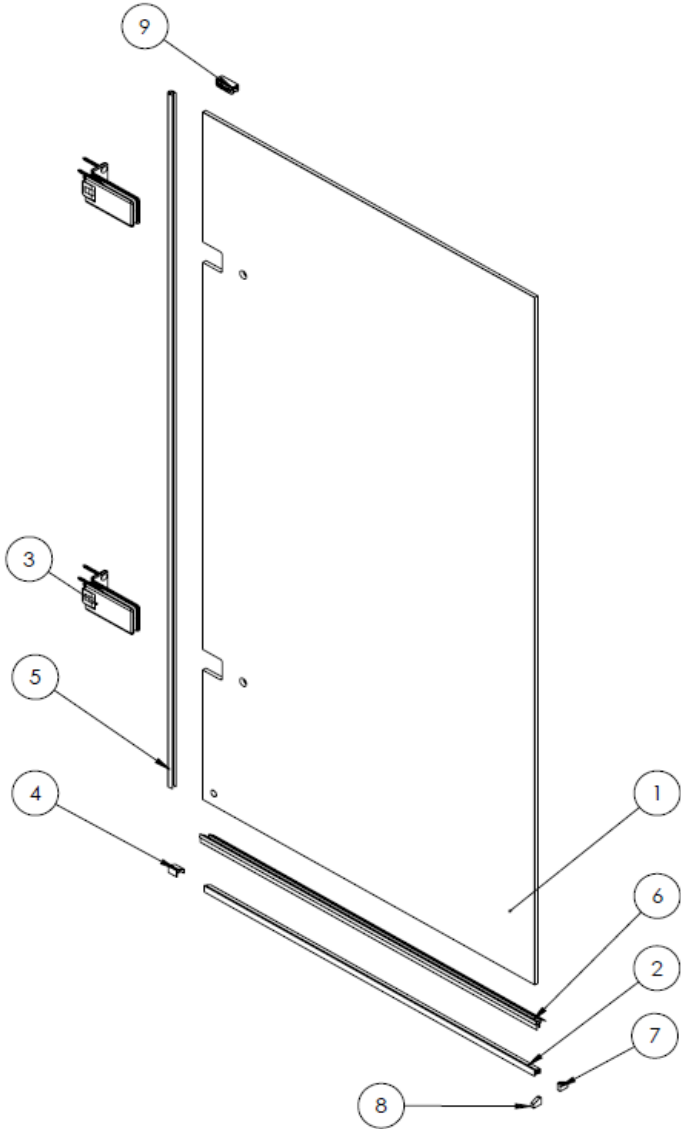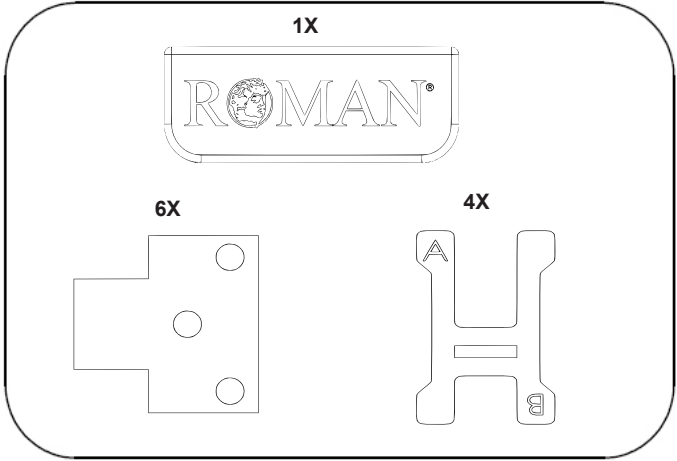

No.	Description	Qty.			
1	Bathscreen Glass	1			
2	Bottom Rail	1			
3	Hinges	2			
4	Wall to Dam Joint	1			
5	Bubble Seal	1			
6	Deflector Seal	1			
7	End Cap LH	1			
8	End Cap RH	1			
9	Branding Badge	1			

Step 1 - Pre-Installation Checks

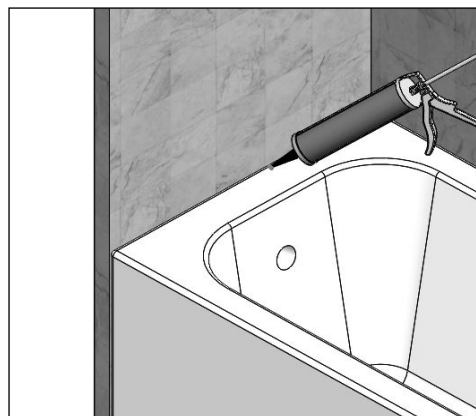
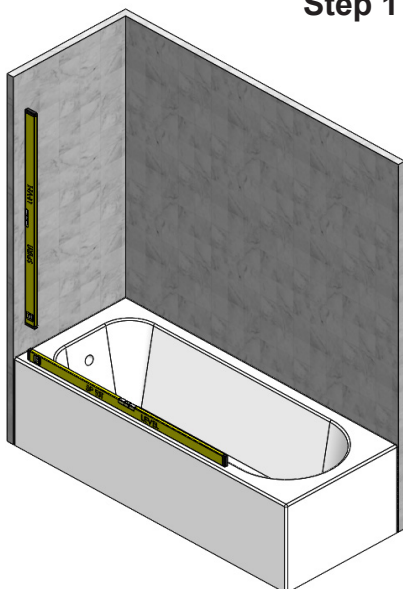


1. Make sure the bath is installed as per the manufacturer's instructions.
2. Check your Bath and Walls are level on all sides (the bubble on the spirit level must be in the centre of the 2 lines).
 - If the Bath & Tray are not level you will not achieve any adjustment.
3. Stand in the tray and check that there is no adverse movement (correct if necessary).
4. The walls should be tiled and grouted up to the bath.
5. The tiles and the bath should be sealed using a good quality bathroom sealant:
 - Spray the seal and joints with the shower head and check for leaks when the silicon has cured.
 - Check the plumbing for leaks.
 - DO NOT plasterboard over the tray.
 - DO NOT grout the tiles when the enclosure has been fitted, the grout may discolour the aluminium profiles.

Step 2 - Bathscreen Positioning

Note: we strongly recommend 2 people carry out the procedures below.

②

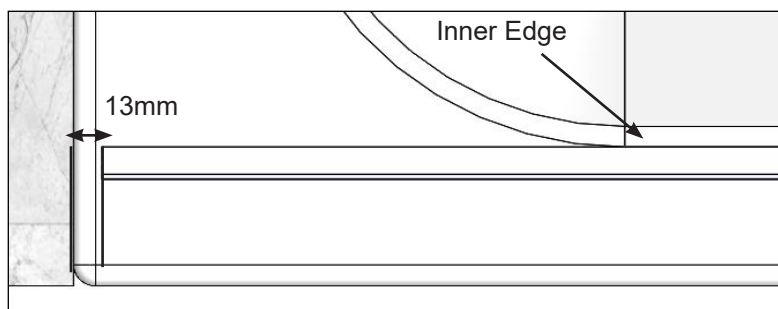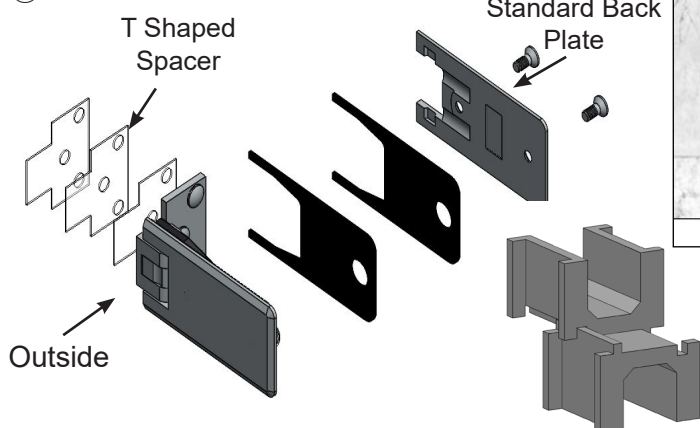




Product Thickness	Gaskets Required
8mm	2 Gaskets either side of the Glass
10mm	1 Thinner Gasket either side of the Glass

1. Take the bathscreen bottom rail and place it so it runs inline with the inner edge of the bath, leaving a 13mm gap from the wall to allow for the damn joint to be fitted.
2. Carefully dismantle the hinge assemblies then fit to the glass ensuring all gaskets are fitted.
 - **Note: Ensure the correct amount of gaskets are fitted (use table above)**
3. Take the red door setting blocks and slide them together to create 2 small assemblies. Position them on the bath and over the bottom rail where the screen is going to go.
4. Lift the screen onto the red setting blocks and up to the wall.
 - **Note: Check the glass is level.**
5. Check between the hinges and wall to see how many "T" shaped spacers are required to correct alignment.
6. Mark the wall through the holes in the hinge bracket.
 - **Placing some masking tape where the Hinges will go will help with marking out and protect the tiles when drilling.**
7. Carefully remove the screen then drill the wall with a 6mm masonry drill (not supplied). Remove the Masking Tape and fit the wall plugs and remove any debris.

Step 3 - Fitting the Bathscreen




Note: we strongly recommend 2 people carry out the procedures below.

1. Remove the hinges from bathscreen glass.
2. If any "T" shaped spacers are required then place them between the hinge and wall. Fasten the hinge to the wall using the countersink screws supplied. Ensure that the gaskets are fitted.
 - **6 "T" Shaped spacers are included with the screen. These are to help with out of true walls.**
3. Replace the Red Door Setting Blocks on the bath where the screen is going.
4. Offer the bath screen glass onto the fitted hinges and onto the red setting blocks.
5. Replace the gaskets and back plates onto the hinges and fully tighten the countersink screws.
 - **See Table for amount of Gaskets required.**
6. The Hinges can be adjusted inward or outward. Loosen the adjusting screw, move the screen to the desired position then tighten the adjustment screw.
7. Place the Wall to Dam Joint up to the wall in the Bottom Strip.

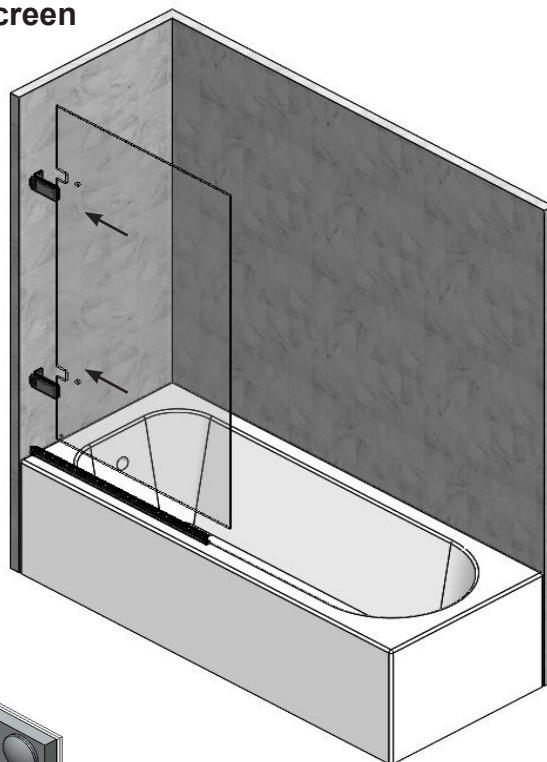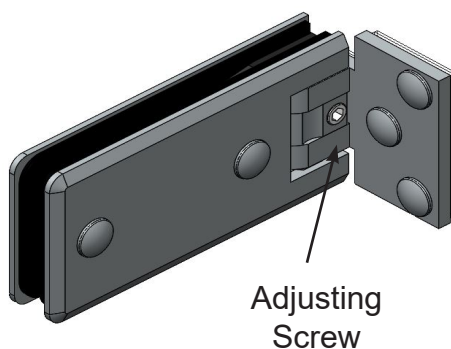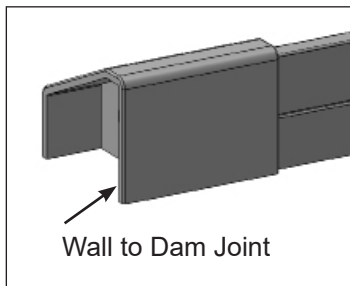

Product Thickness	Gaskets Required
8mm	2 Gaskets either side of the Glass
10mm	1 Thinner Gasket either side of the Glass

Step 4 - Fitting Seals & Sealing

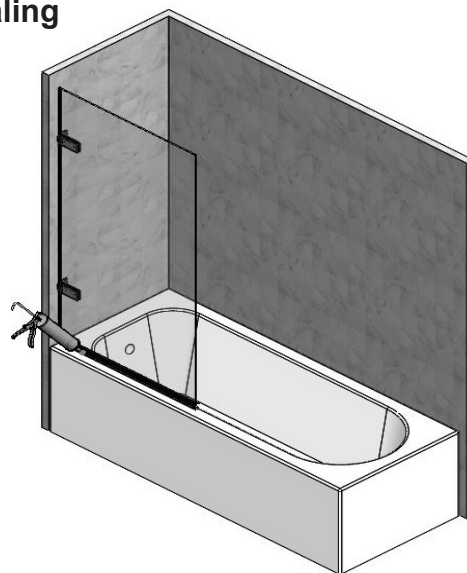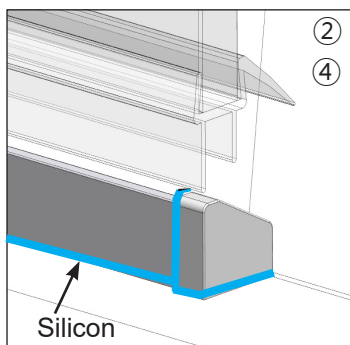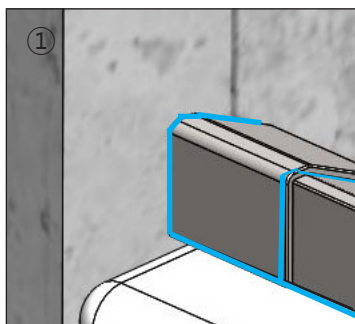

1. Lift the wall to dam Joint and place a bead of silicon to the base, add a bead of silicon in the inside of the wall to dam Joint at the side that goes over the bottom rail and refit.
 - **NOTE: Ensure the sloped side of the bottom rail is on the inside.**
2. Repeat the process as above with the end cap and fit to the end of the bottom rail.
3. Place a bead of silicon around the top of the wall to dam Joint, up the sides and to the wall.
4. Apply a bead of silicon along the base of the bottom rail where it meets the bath top and around the end cap at the base and the joint where it meets the bottom rail.
 - **IMPORTANT: Allow silicon to cure for 24 hours before use.**
5. Cut 3 lengths of bubble seals and fit above, below and inbetween the hinges.
 - **Ensure the bottom bubble seal is long enough to meet the top of the wall to dam joint in order to effectively seal the product.**
6. take the bottom deflector seal and trim down to the require legnth and fit onto the bottom of the glass.
 - **Ensure that the deflector on the bottom seal is facing inward towards the shower.**
7. Apply a small amount of silicon to the upper inner face of the branding clip and fit to the top of the glass.

Trouble Shooting Guide

Should you experience any problems during installation please refer to the Trouble Shooting Guide or contact Customer Relations on:
+44 (0) 1325 328033

To enable customer relations to provide you with an excellent level of service it is important that you quote your product Code and Reference Number - these can be found on the Guarantee card.

Problem	Solution
Leaking	1. Check that the bottom rail has been sealed correctly and on the outside only. 2. Ensure the Bath is sealed along the tiled walls prior to installation. 3. If the inside joint between the enclosure and the bath top is sealed, this will cause leakage - sealant must be removed. 4. Ensure the joint between the enclosure and bath top is sealed on the outside. 5. Ensure that the seals are cut to the correct length and fitted correctly. <u>Important: This enclosure should be water tested conforming to BS EN 14428</u>
Product Alignment on Bath	1. Have you read and understood Step 1 of the instructions? 2. Is the enclosure fitted onto a tiled wall? 3. Is the wall profile completely vertical?
Screen not operating correctly	1. Ensure both Hinge Assemblies are completely vertical. 2. Adjusting the Set screw on the inside of the Hinges can help. 3. Ensure the Bath is completely level. 4. Check the bottom of the screen is parallel to the top of the bath.

Please Note

If you attach or hang items, such as shampoo holders, shower baskets etc. onto this shower enclosure, please ensure all edges, that make contact with the glass, are well protected with a soft material such as rubber/ plastic.

Failure to do so may result in damage to the glass or even glass breakage. Bathroom accessory holders such as shower baskets should NOT be over loaded, which can stress the bare edges of the glass.

Bathroom accessory holders, such as Shower baskets, should not be placed where they could interfere with the operation of the enclosure or come into contact with moving parts.

Important Information to help you maintain your Product:

The following information is all you need to keep your product looking new.

Our products are generally maintenance free, however it may be necessary to lubricate wheel assemblies and other moving parts such as hinges from time to time.

Clean your product using a mild detergent diluted in water and then polished off using a soft cloth.

If you live in a hard water area, periodically clean your product using a 50/50 solution of white vinegar and water. The solution should be left on the enclosure for approximately 5 minutes then rinsed off using warm water. This method of cleaning should remove lime scale residue.

It is strongly recommended that a quality silicone spray is used.

A list of Donts

1. Don't use acidic based products which are unsuitable for cleaning enamel surfaces.
2. Don't use abrasive cleaners or cleaners using bleach or solvents, these products will adversely affect the finish of the aluminium profiles.
3. Don't use scouring pads, powder or any sharp instruments when cleaning the enclosure.