


# V8CC1/V8CC2

## Bath Screen

### Instruction Manual

---

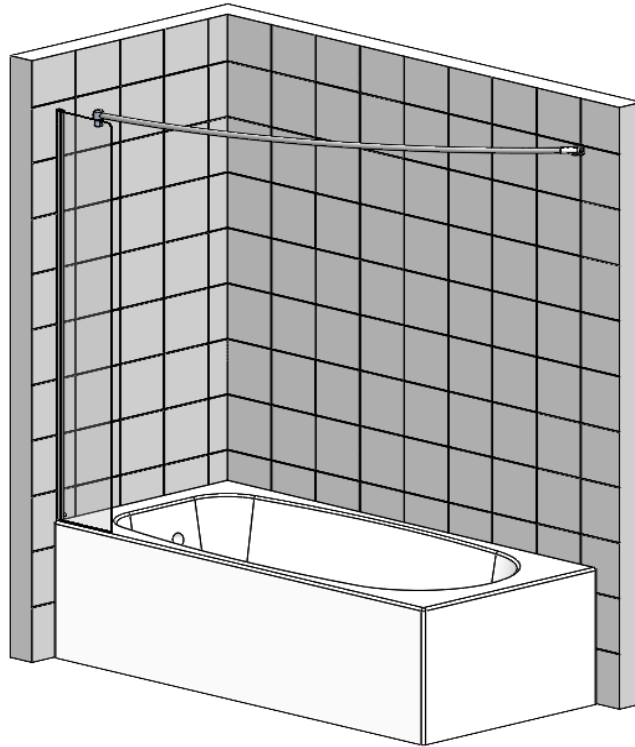

#### Handling

Be aware toughened glass can shatter if not handled correctly. It should not be subjected to any sharp impact and it is essential to protect the glass by resting it on a soft protective surface during installation such as cardboard or carpeting. It is recommended to wear PPE at all times during installation.




#### Pre-Installation Checks


1. Please take time to read these instructions prior to installing your product, including the Tray Sizes section below.
2. Check you have the correct product, by looking at the labels on the side of the product packaging.
3. Check all the product components and fixing kits are in the box - these are listed on the next page.
4. Please check the product for defects or damage, once the installation has commenced we cannot accept responsibility for any defects or damage.
5. Before you commence any drilling check there are no hidden electrical cables and/or water pipes.
6. No attempt should be made to re-work the toughened safety glass.
7. The installation of the product should be performed by two persons.
8. It is strongly recommended the product is fitted on a tiled surface or similar waterproof surface - which are tiled and grouted before product is installed.
9. It is strongly recommended that the walls the product is going to be installed on are vertical, and the floor/tray is level.
10. Please note that some natural misting may occur when you remove this product from its packaging, due to the addition of the glass protection pre-coating. If this does occur this can easily be removed with a soft, dry cloth.

#### Consumer Guarantee



Please make sure the purchaser/end user completes and returns the guarantee card which is enclosed with this product. Failure to validate the Guarantee will mean only the 1 Year Statutory Guarantee will apply.

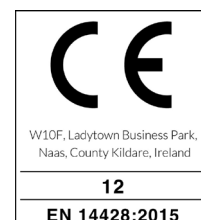

**Equipment Checklist: Not Supplied**

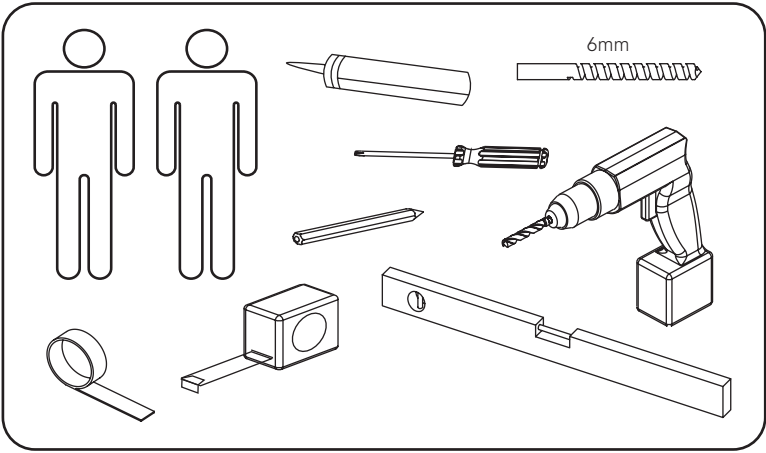



**Fixing Kit Components**

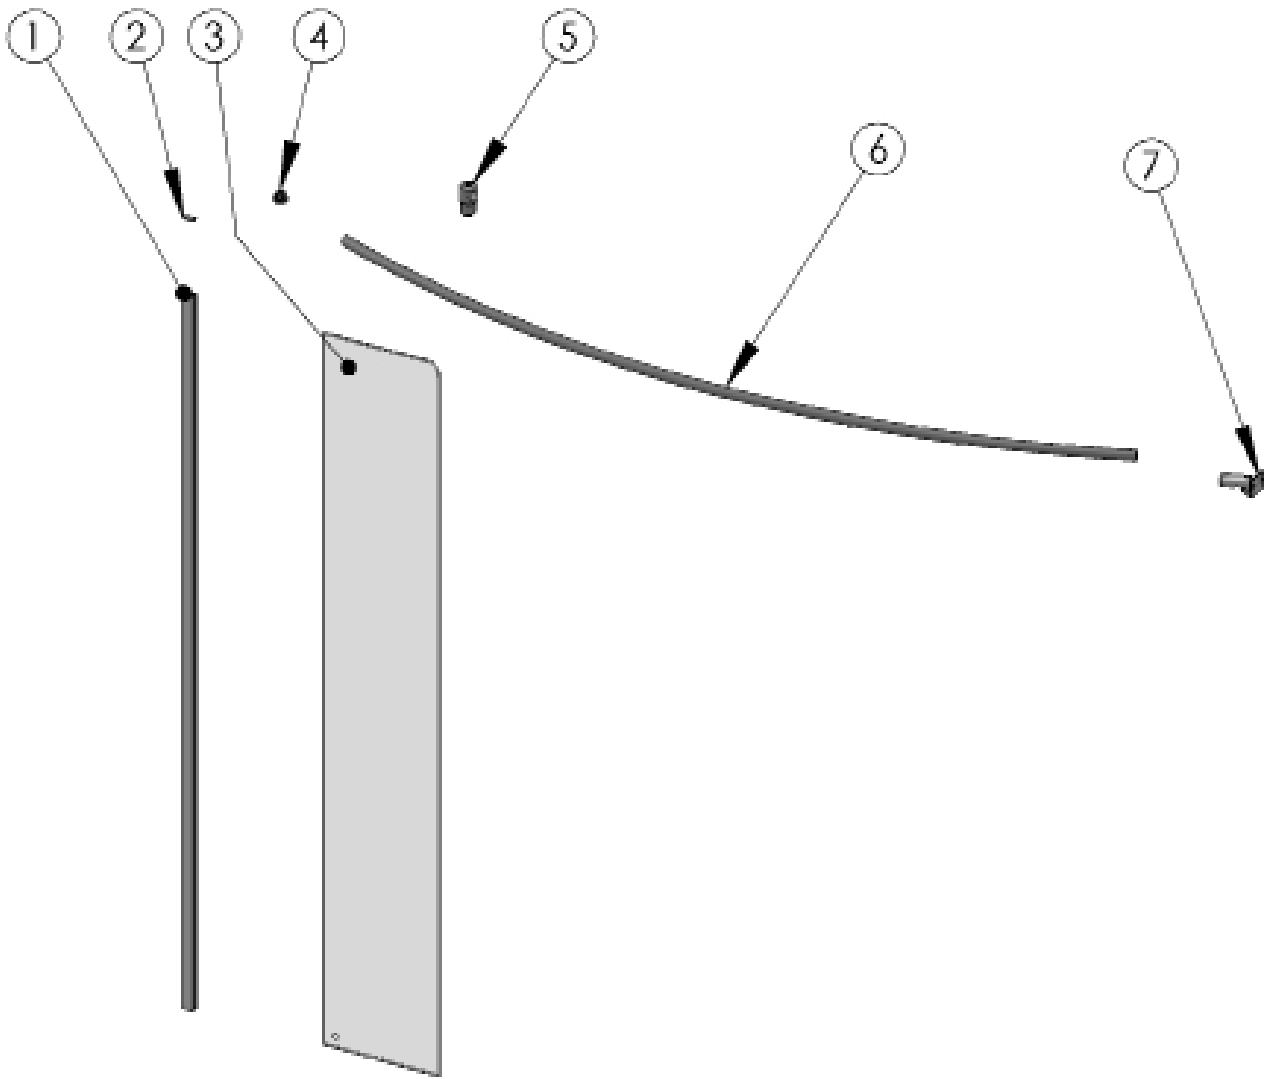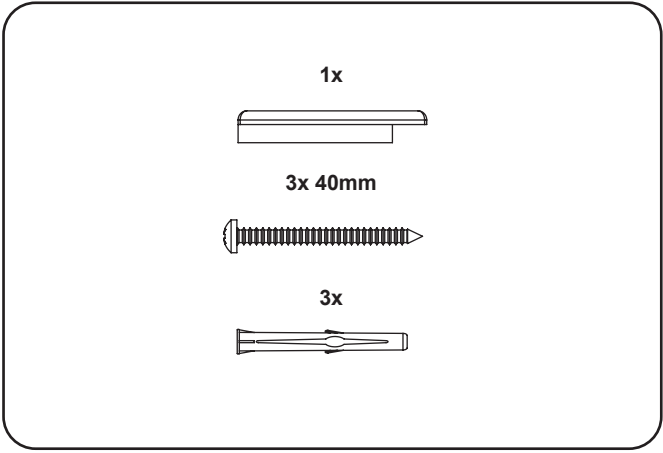

**NOTE: Part numbers 4 to 7 are for product code V8CC2 only.**




| Part No. | Description  | Qty | Part No. | Description | Qty | Part No. | Description | Qty |
|----------|--------------|-----|----------|-------------|-----|----------|-------------|-----|
| 1        | Wall Profile | 1   | 11       |             |     | 21       |             |     |
| 2        | End Cap      | 1   | 12       |             |     | 22       |             |     |
| 3        | Panel Glass  | 1   | 13       |             |     | 23       |             |     |
| 4        | End Stopper  | 1   | 14       |             |     | 24       |             |     |
| 5        | Glass Clamp  | 1   | 15       |             |     | 25       |             |     |
| 6        | Curved Rail  | 1   | 16       |             |     |          |             |     |
| 7        | Wall Bracket | 1   | 17       |             |     |          |             |     |
| 8        |              |     | 18       |             |     |          |             |     |
| 9        |              |     | 19       |             |     |          |             |     |
| 10       |              |     | 20       |             |     |          |             |     |

## Step 1 - Pre-Installation Checks

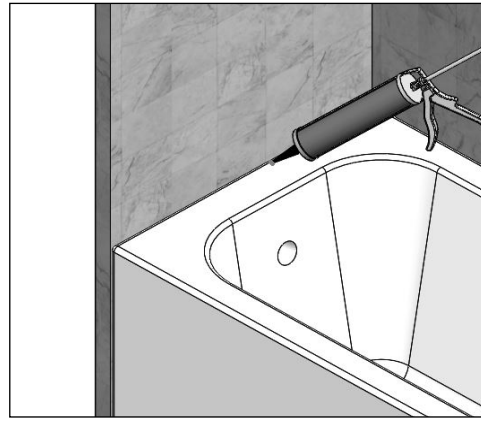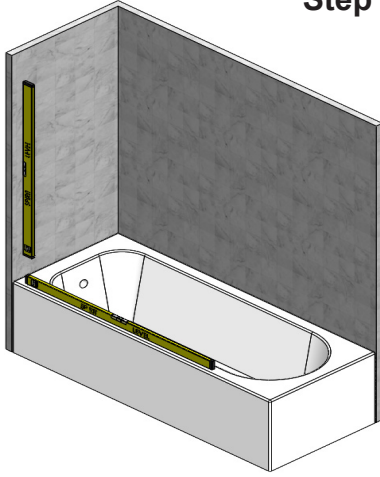

1. Make sure the bath is installed as per the manufacturer's instructions.
2. Check your Bath and Walls are level on all sides (the bubble on the spirit level must be in the centre of the 2 lines).
  - If the Bath & Tray are not level you will not achieve any adjustment.
3. Stand in the tray and check that there is no adverse movement (correct if necessary).
4. The walls should be tiled and grouted up to the bath.
5. The tiles and the bath should be sealed using a good quality bathroom sealant:
  - Spray the seal and joints with the shower head and check for leaks when the silicon has cured.
  - Check the plumbing for leaks.
  - DO NOT plasterboard over the tray.
  - DO NOT grout the tiles when the enclosure has been fitted, the grout may discolour the aluminium profiles.




## Step 2 - Wall Profile Positioning

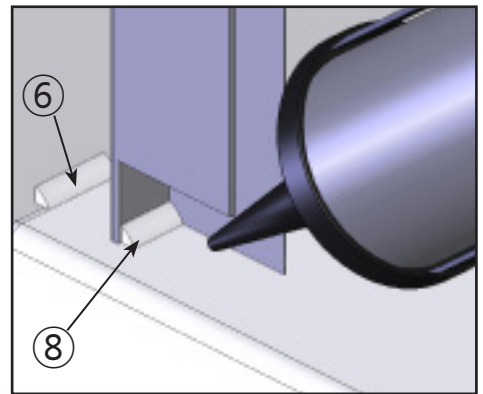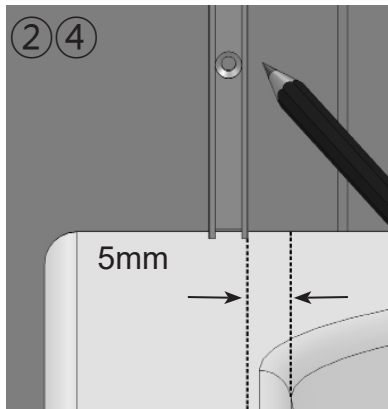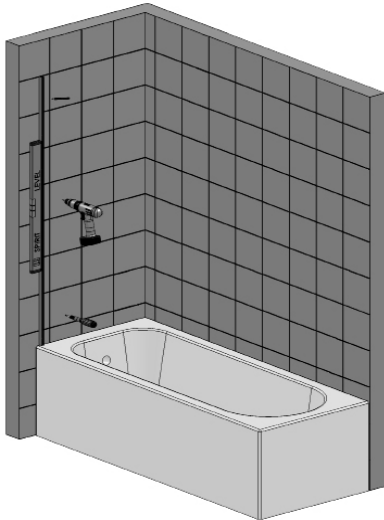

1. Decide which end of the bath is to be fitted with the Mini Bath Screen.
2. Position the inside edge of the Wall Profile 5mm in from the inside edge of the Bath (as shown).
3. Make sure the Wall Profile is vertical using a spirit level.
4. Using a pencil, mark the locations for the drill holes through the holes in the Wall Profile.
5. Drill the holes using a 6mm masonry drill (not supplied). Fit the wall plugs (supplied) into the drilled holes.
  - **Remove any debris which has occurred during drilling before moving to the next stage.**
6. Before fitting the Wall Profile apply a bead of sealant at the bottom where it will meet the tiled wall.
7. Screw fix the Wall Profile to the wall using the 40mm screws (supplied) ensuring it is vertical.
8. Apply a bead of sealant to the inside of the Wall Profile at the bottom where it meets the Bath top.

**Important: The wall profile must be completely vertical (the bubble should be in the centre of the 2 lines on the spirit level). The sealant must be applied in steps 6 and 8; failure to follow out this procedure may result in serious water damage and is not covered under the terms of the guarantee.**

### Step 3 - Fitting the Glass

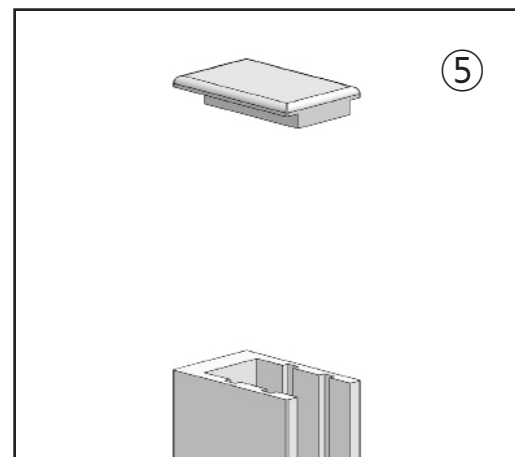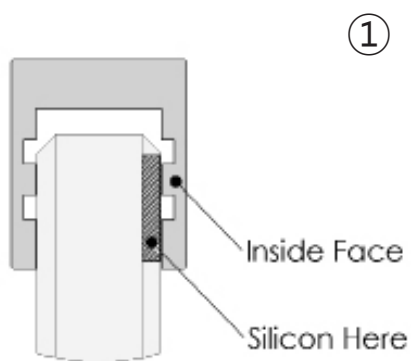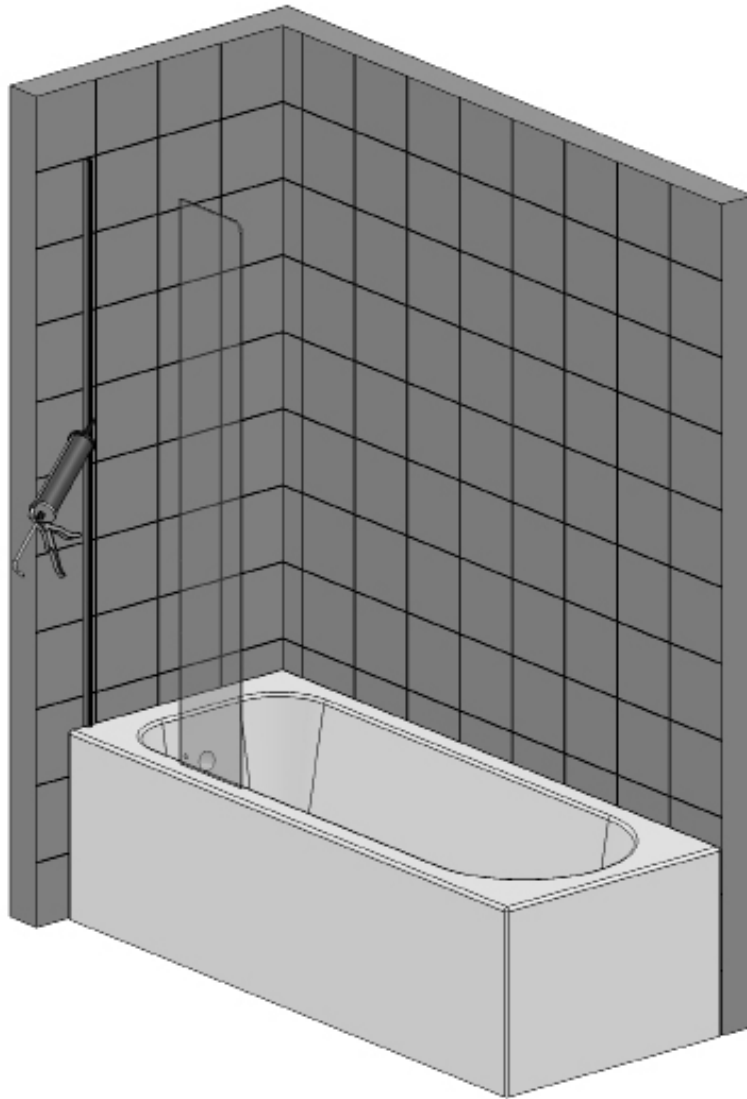


1. On the inside of the Wall Profile towards the front add a bead of silicon vertically all the way down.
  - **NOTE: Be careful not to apply too much silicon as it may become messy.**
2. Ensure that the edge of the Panel Glass that is going into the Wall Profile is clean and free from any contaminants.
3. Carefully lift the Panel Glass and place it into the Wall Profile and push fully home.
  - **IMPORTANT: You may need to support the Panel Glass in some way until the silicon has cured.**
4. Carefully clean off any excess silicon that may of crept out of the Wall Profile.
5. Fit the End Cap to the top of the Wall Profile.


#### Step 4 - Fit Rail (V8CC2 Only)

NOTE: Two people will be required to carry out this operation.




NOTE: The Rail May be fitted in an alcove or corner orientation as shown

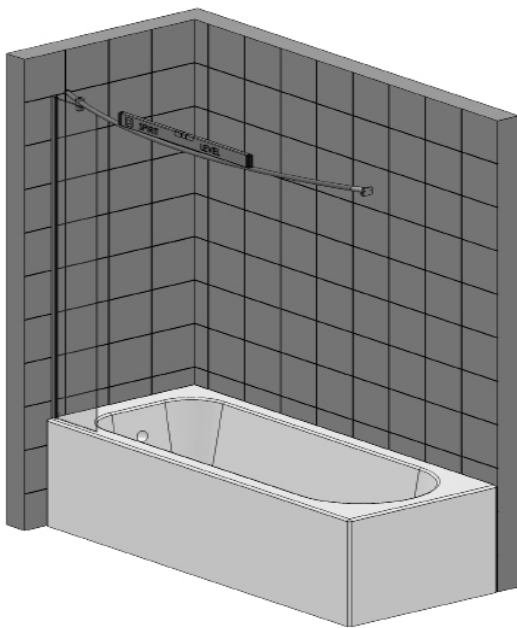

ALCOVE


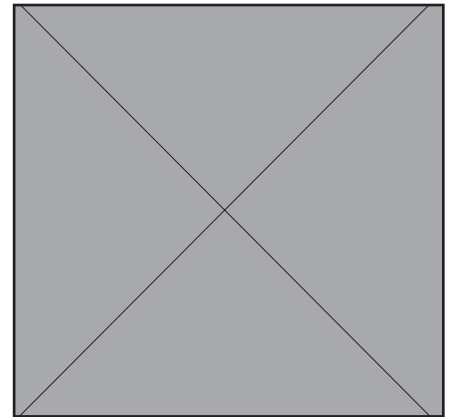


CORNER

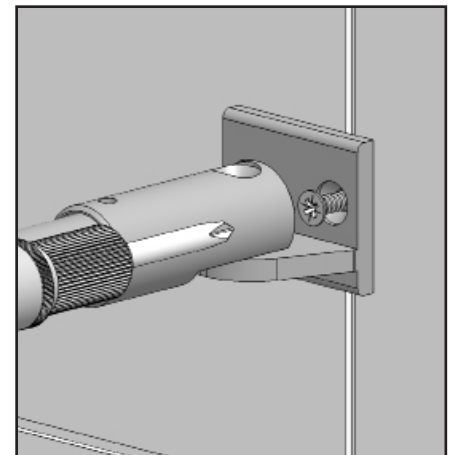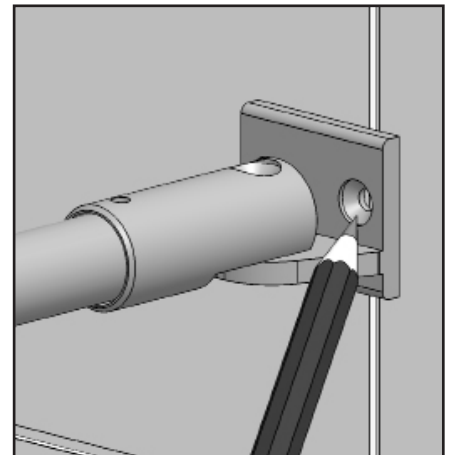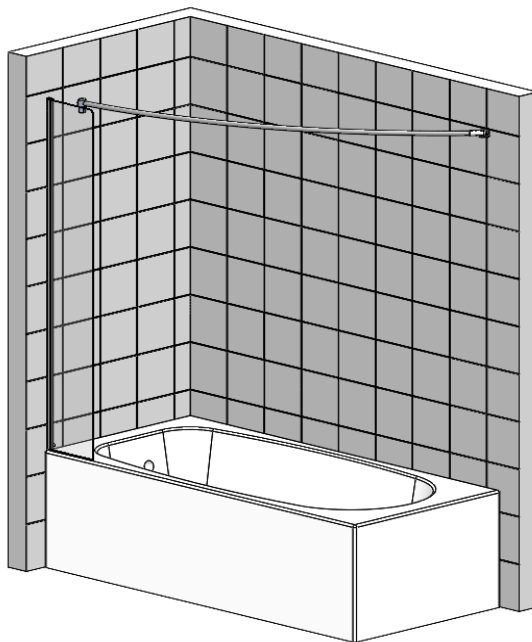

1. Remove the Curved Rail Assembly from its box and carefully fit the Glass Clamp over the tube at the opposite end to the Wall Bracket (DO NOT tighten at this stage).
2. Place the whole assembly onto the Panel Glass and position it evenly over the Bath.
3. Ensure the Curved Rail is horizontal with the aid of a Spirit Level. Mark the tiled wall through the holes in the Wall Bracket.
  - **The Curved Rail must be level, use a Spirit Level and ensure the bubble is in the middle of the two lines.**
4. Carefully remove the whole assembly, drill the tiled wall using a 6mm Masonry Drill (not supplied) and fit the Wall Plugs.
5. Refit the whole assembly onto the Panel Glass. Fix the Wall Bracket to the tiled wall and tighten the Glass Clamp onto the Glass making sure the gaskets are fitted. Ensure the bow in the Curved Rail is level then fully tighten all screws.
  - **IMPORTANT: If you need to cut the Curved Rail down for any reason please ensure that you cut the end that goes into the Wall Bracket and you carefully remove all burrs.**

## Step 5 - Sealing

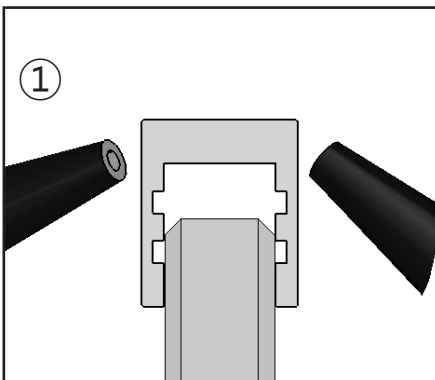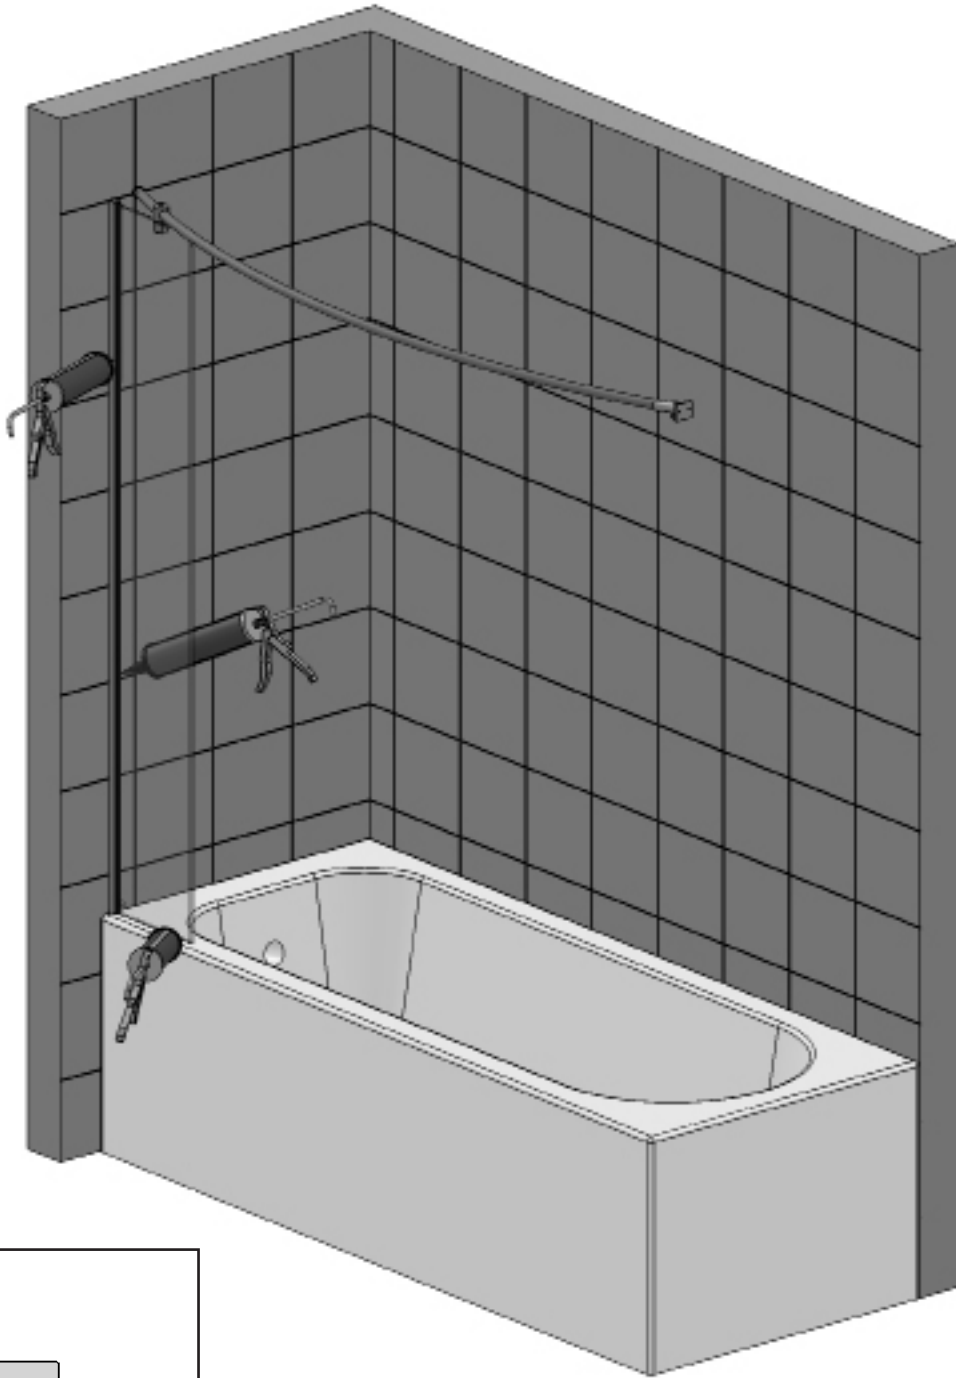

1. Seal vertically both sides of the Wall Profile inside and out.
2. Fully seal the base of the Bath Screen to the bath on the outside only.
3. Place the Branding Badge (if applicable) onto a prominent piece of aluminium at the top.

- **IMPORTANT:** Failure to follow Stages 1 and 2 may result in serious water damage and will not be covered under the terms of the guarantee.
- Please allow 24 hours for the sealant to fully cure before using the enclosure.

# Trouble Shooting Guide

Should you experience any problems during installation please refer to the Trouble Shooting Guide or contact Customer Relations on:  
**+44 (0) 1325 328033**

To enable customer relations to provide you with an excellent level of service it is important that you quote your product Code and Reference Number - these can be found on the Guarantee card.

| Problem                      | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Leaking                      | <ol style="list-style-type: none"><li>1. Check that the inside gap between the tray and wall profiles has been sealed correctly.</li><li>2. Ensure the tray is sealed along the tiled walls prior to installation.</li><li>3. If the inside joint between the enclosure and the tray top is sealed, this will cause leakage - sealant must be removed.</li><li>4. Ensure the wall profiles on the tiled walls are sealed both vertically inside and outside.</li><li>5. Ensure the joint between the enclosure and tray top is sealed.</li><li>6. The deflector on the bottomseals is semi rigid and can be carefully altered to offer more deflection of the water.</li><li>7. Check the angled magnets are locating and there are no gaps.</li></ol> <p>Important: This enclosure should be water tested conforming to BS EN 14428</p> |
| Enclosure Alignment on Tray  | <ol style="list-style-type: none"><li>1. Is the enclosure fitted onto a tiled wall?</li><li>2. Are the wall profiles fitted 15mm from the outside edge of the tray?</li><li>3. Is the wall profile completely vertical?</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Door not operating correctly | <ol style="list-style-type: none"><li>1. Ensure both wall profiles are completely vertical.</li><li>2. Ensure the tray is completely level.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## Please Note

If you attach or hang items, such as shampoo holders, shower baskets etc. onto this shower enclosure, please ensure all edges, that make contact with the glass, are well protected with a soft material such as rubber/ plastic. Failure to do so may result in damage to the glass or even glass breakage. Bathroom accessory holders such as shower baskets should not be over loaded, which can stress the bare edges of the glass. Bathroom accessory holders, such as Shower baskets, should not be placed where they could interfere with the operation of the enclosure or come into contact with moving parts.

## Important Information to help you maintain your Product:

The following information is all you need to keep your product looking new.

Our products are generally maintenance free, however it may be necessary to lubricate wheel assemblies and other moving parts such as hinges from time to time.

Clean your product using a mild detergent diluted in water and then polished off using a soft cloth.

If you live in a hard water area, periodically clean your product using a 50/50 solution of white vinegar and water. The solution should be left on the enclosure for approximately 5 minutes then rinsed off using warm water. This method of cleaning should remove lime scale residue. It is strongly recommended that a quality silicone spray is used.

## A list of Donts

1. Don't use acidic based products which are unsuitable for cleaning enamel surfaces.
2. Don't use abrasive cleaners or cleaners using bleach or solvents, these products will adversely affect the finish of the aluminium profiles.
3. Don't use scouring pads, powder or any sharp instruments when cleaning the enclosure.