


4-Panel Bath Screen

H3D13CS

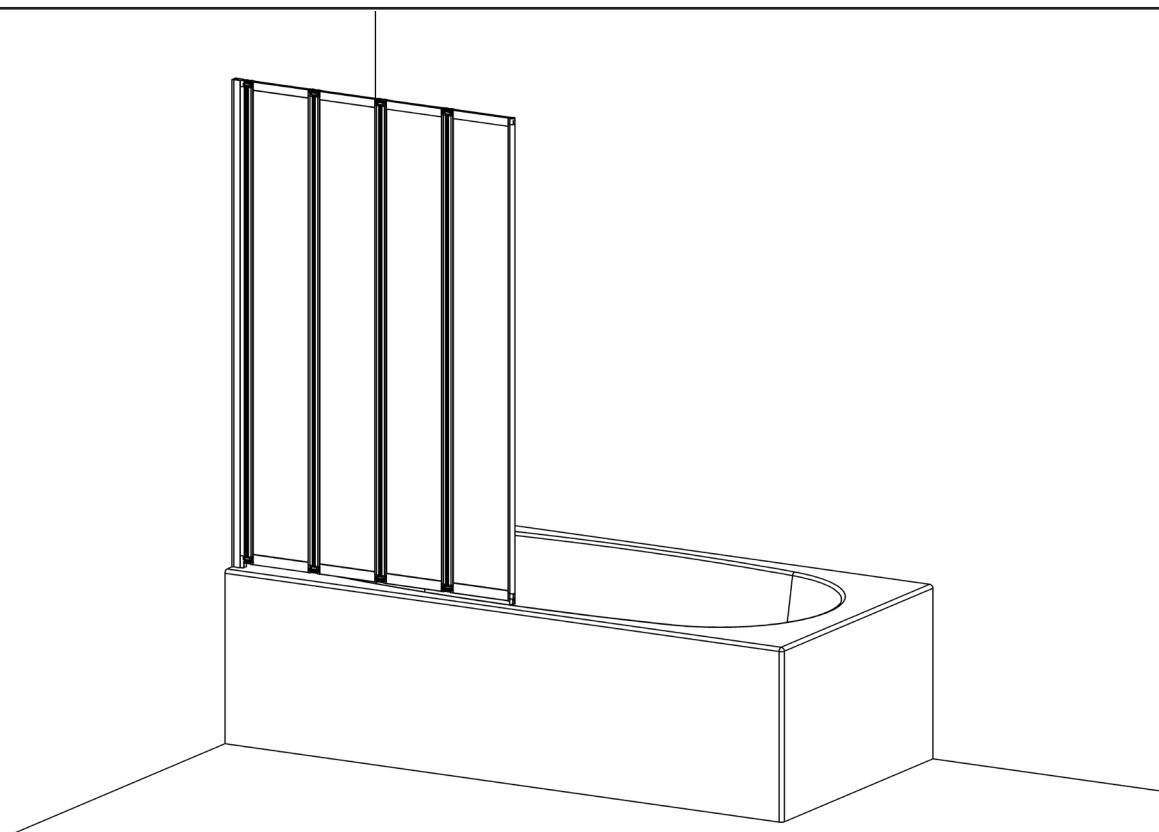

Handling

Be aware toughened glass can shatter if not handled correctly. It should not be subjected to any sharp impact and it is essential to protect the glass by resting it on a soft protective surface during installation such as cardboard or carpeting. It is recommended to wear PPE at all times during installation.



Pre-Installation Checks

1. Please take time to read these instructions prior to installing your product, including the 'Pre Installation Checks' on Page 1.
2. Check you have the correct product, by looking at the labels on the side of the product packaging.
3. Check all the product components and fixing kits are in the box - these are listed on the next page.
4. Please check the product for defects or damage, once the installation has commenced we cannot accept responsibility for any defects or damage.
5. Before you commence any drilling check there are no hidden electrical cables and/or water pipes.
6. No attempt should be made to re-work the toughened safety glass.
7. The installation of the product should be performed by two persons.
8. It is strongly recommended the product is fitted on a tiled surface or similar waterproof surface - which are tiled and grouted before product is installed.
9. It is strongly recommended that the walls the product is going to be installed on are vertical, and the bath is level.
10. Please note that some natural misting may occur when you remove this product from its packaging, due to the addition of the glass protection pre-coating. If this does occur this can easily be removed with a soft, dry cloth.

It is important to note that the glass must not be mounted or 'pinched' in such a way that would cause a stress point to develop in the glass. In addition, it must not be subject to any sharp impact or severe temperature fluctuation which may also cause a stress point to develop in the glass.

Toughened glass is physically and thermally significantly stronger than standard glass. During the toughening process the stresses contained within any glass are balanced so if in the unlikely event situation any of the above occurs and the glass breaks, the glass will shatter safely into small thumbnail sized blunt fragments.

This product is NOT recommended for use with pumped or pressurised systems.

Consumer Guarantee

Please make sure the purchaser/end user completes and returns the guarantee card which is enclosed with this product. Failure to validate the Guarantee will mean only the 1 Year Statutory Guarantee will apply.




PO Box 125, Whitworth Avenue,
Aycliffe Business Park,
Co Durham DL5 6WX

To obtain a copy of the Declaration of Performance for this product, please go to: www.ce-dop.com, contact us on +44 (0) 1325 328034, or write to us at the above address, quoting the product reference number where possible.




REV01 - 03.2026



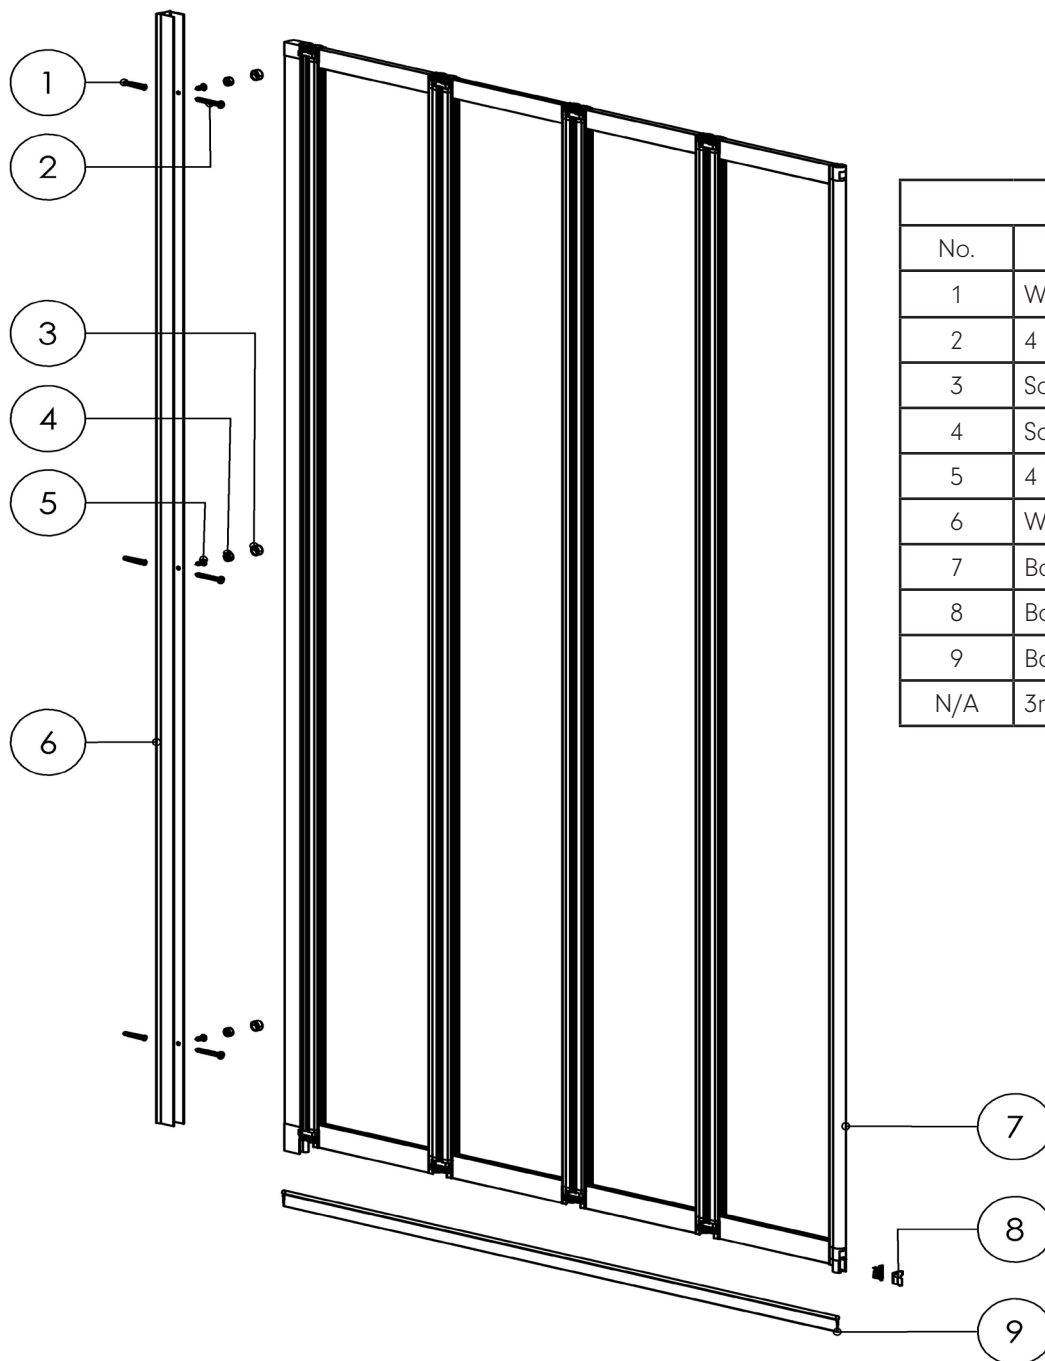


4-Panel Bath Screen		
No.	Description	Qty.
1	Wall Plug	3
2	4 x 30mm Wall Fixing Screw	3
3	Screw Cover Cap	3
4	Screw Base	3
5	4 x 12mm Self Tapping	3
6	Wall Profile	1
7	Bath Screen Assembly	1
8	Bottom Cap (L/R)	2
9	Bottom Seal	1
N/A	3mm Drill Bit	1





Equipment Checklist: Not Supplied

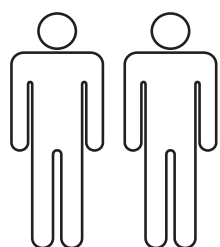

Two Person Fit


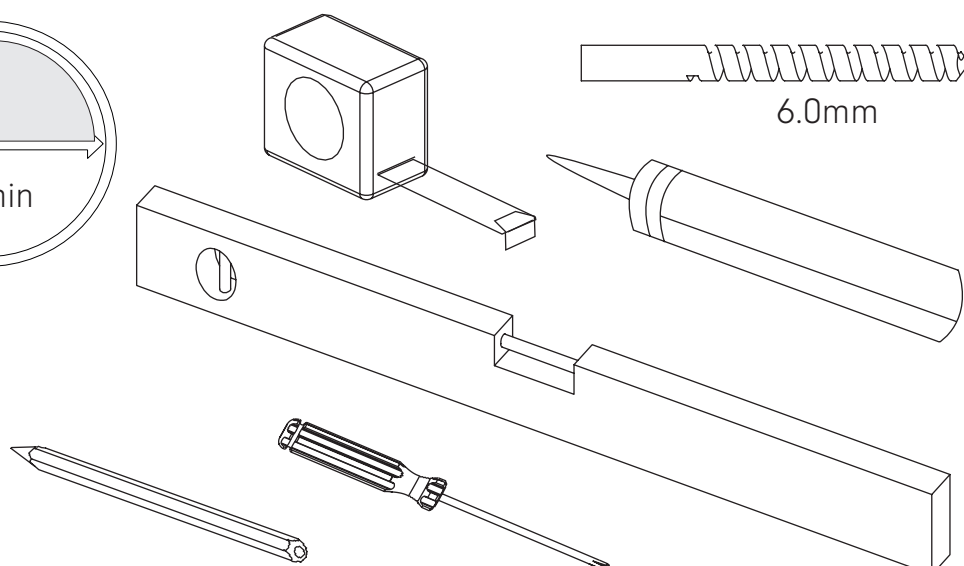
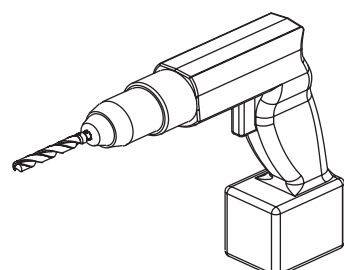
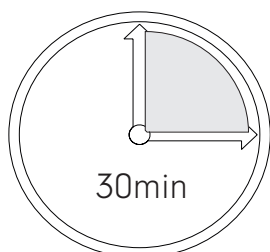


Step 1 - Pre-Installation Checks

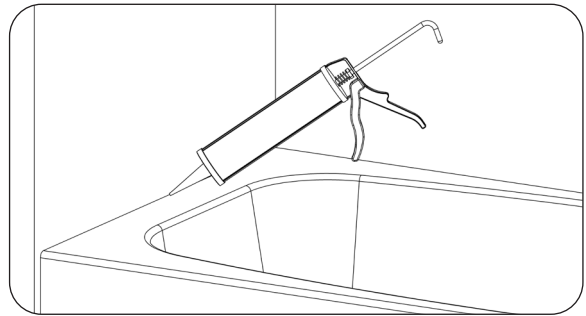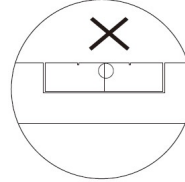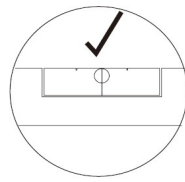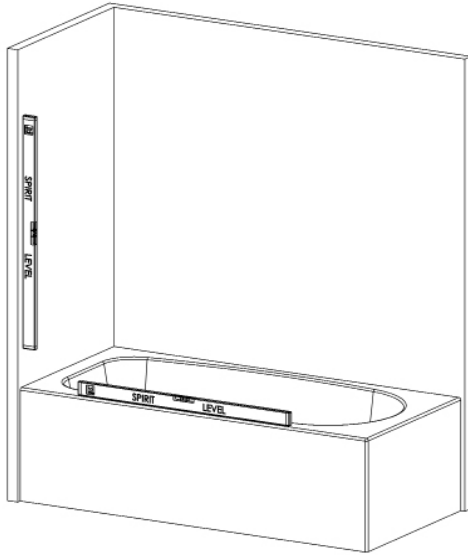


1. Make sure the bath is installed as per the manufacturer's instructions.
2. Check your bath and walls are level on all sides (the bubble on the spirit level must be in the centre of the 2 lines).
3. Stand in the bath and check that there is no adverse movement (correct if necessary).
4. The walls should be tiled and grouted up to the bath.
5. The tiles and the bath should be sealed using a good quality bathroom sealant:
 - Spray the seal and joints with the shower head and check for leaks when the silicon has cured.
 - Check the plumbing for leaks.
 - DO NOT plasterboard over the bath.
 - DO NOT grout the tiles when the enclosure has been fitted, the grout may discolour the aluminium profiles.

Step 2 - Fitting Wall Profile

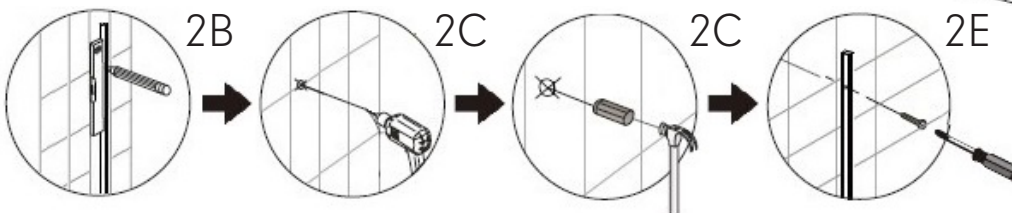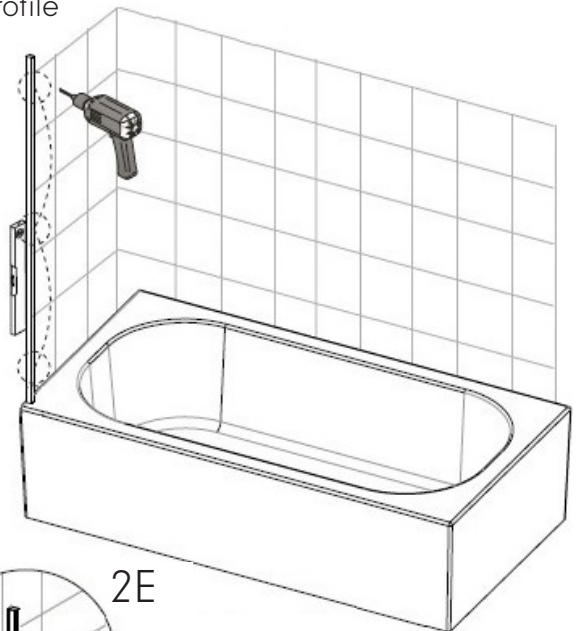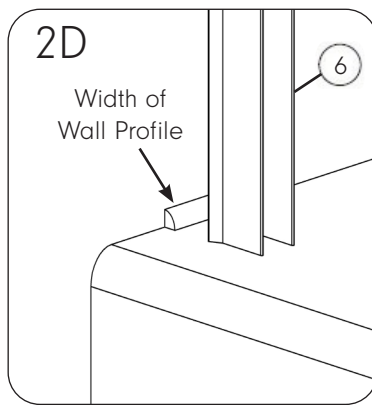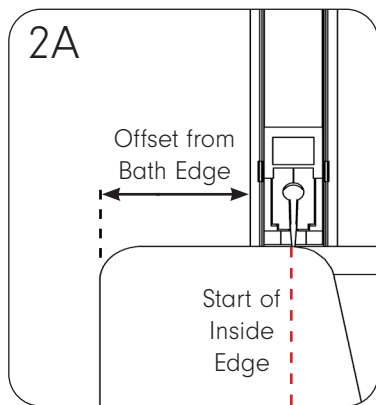


- A) Position your wall profile (6) so that the bath screen is fitted to the inside edge of the bath and mark this position.
- B) Mark the fixing positions through your wall profile (6).
 - Please make sure your wall profile is fully plumb when marking the fixing positions.
- C) Drill the fixing positions with a 6mm drill bit (not supplied) and fit the wall plugs (1) into the 3 drilled holes.
- D) Place a bead of bathroom sealant (not supplied) the width of the wall profile between the tiled wall and bath.
 - **IMPORTANT:** Failure to carry out this stage can result in serious water damage and is not covered by the guarantee.
- E) Using the 30mm wall fixing screws (2) secure the wall profile (6) to the wall. Do not over tighten the screws into the wall profile. Ensure the wall profile stays completely vertical throughout this procedure using a spirit level.

Step 3 - Fitting Bath Screen Assembly

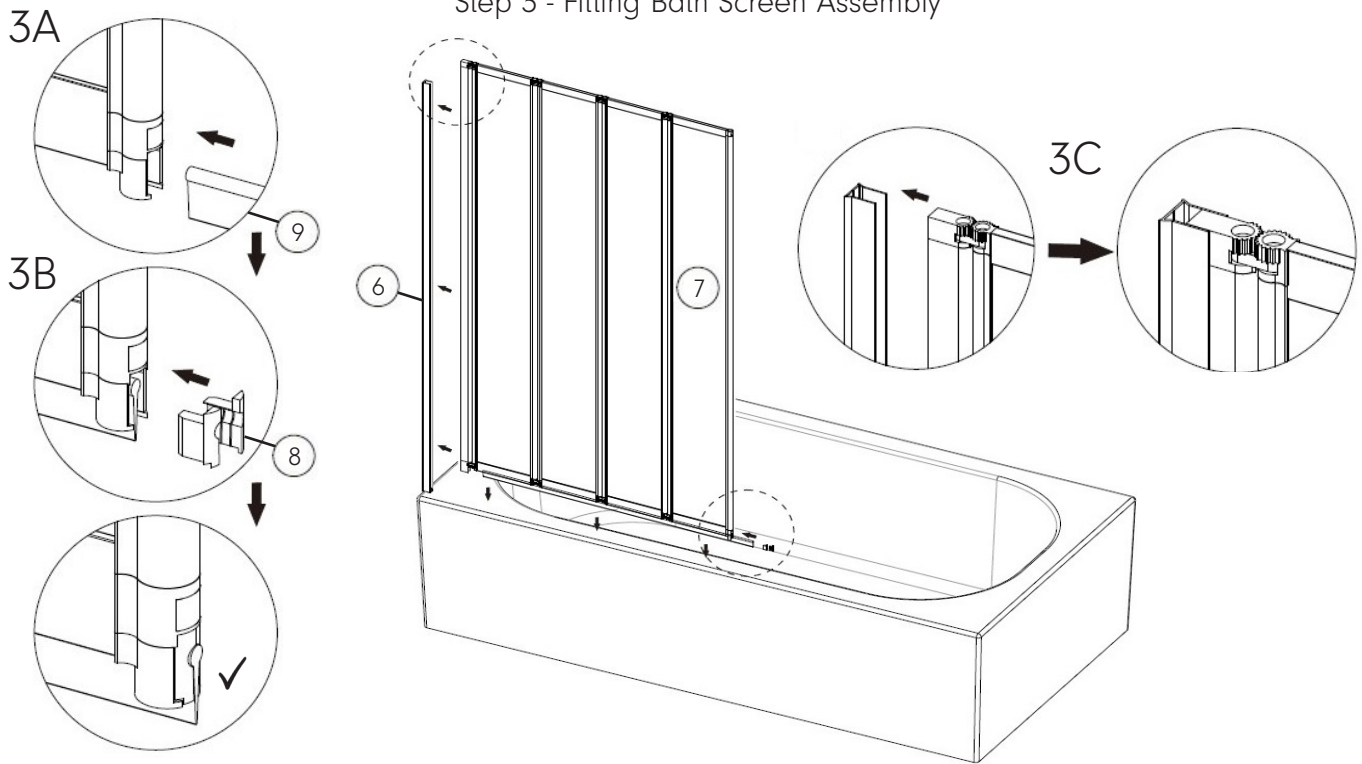



- A) At the bottom of the bath screen assembly (7) slide the bottom seal (9) along the full length.
- B) Fit both bottom cap mouldings (8) into the bath screen assembly (7) in order to hold the bottom seal (9) in place.
- C) Place the bath screen assembly (7) on the top of the bath and fit it inside the wall profile (6).
- 2 people may be required for this step.
 - As per STEP 2A, please make sure that the assembly is fitted inline with the inside edge of the bath.
- D) Check to see that the assembly is sitting fully down on top of the bath and it is parallel to the outside edge of the bath.

Step 4 - Pinning of Product

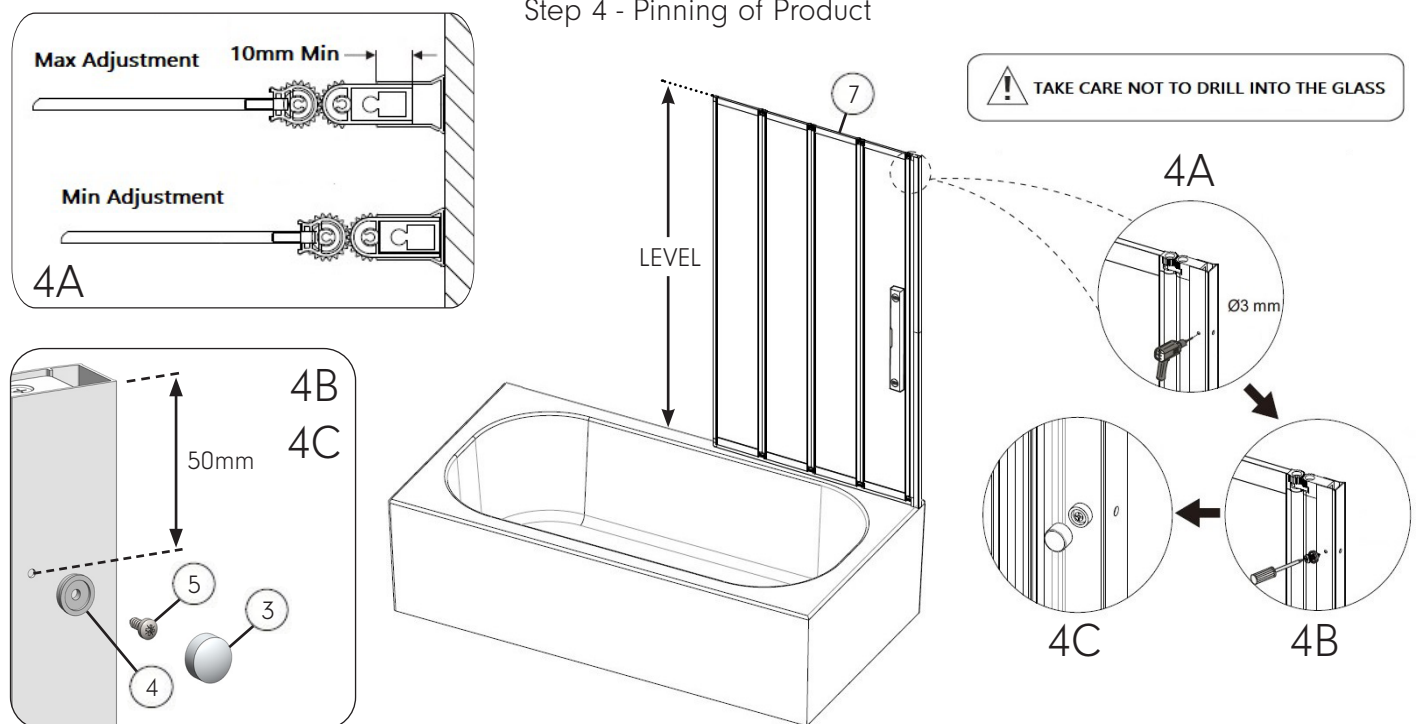

- A) On the inside of the enclosure, with the 3mm drill bit (supplied), drill a hole through the wall profile and vertical profile approximately 50mm from the top and bottom and one in the centre (3 in total).
- Ensure that the bath screen assembly remains fully level during the drilling process.
 - Please ensure that there is a minimum of 10mm internal overlap between the wall profile and vertical profile.
 - Please take care when drilling the product as to not drill into the glass.
- B) Fit the screw bases (4) onto the self tapping screws (5) and pin the product through the drill holes.
- C) Fit the screw cover caps (3) to the screw bases (4).

Step 5 - Fitting Side Panel & Handing of Door

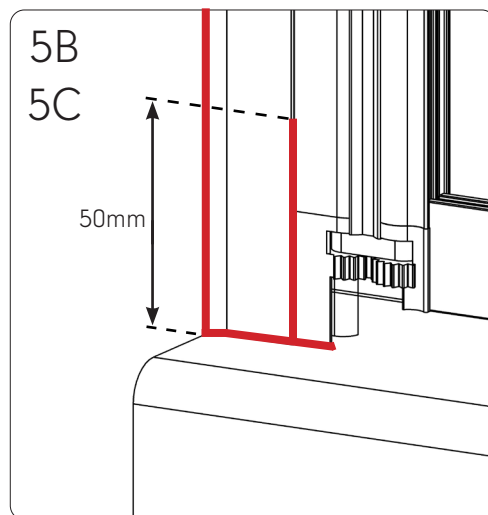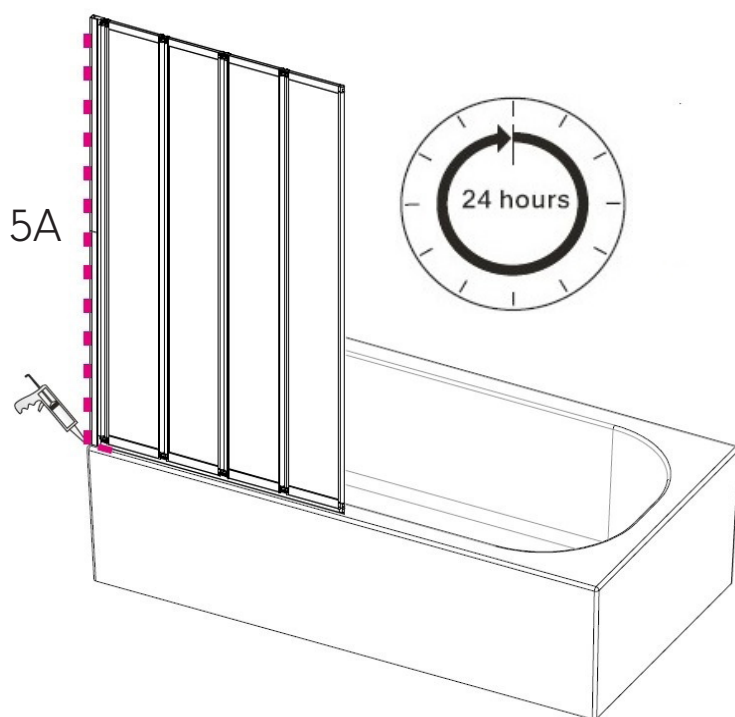

A) Using a good quality sealant, seal both sides of the wall profile vertically inside and outside where it meets the tiled wall.



B) Seal the bottom of the bath screen assembly where it meets the bath top on the outside only.

C) Seal 50mm vertically on the join between the frame and the wall profile on the outside only.

- DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING.

- **IMPORTANT:** Failure to carry out stages A, B & C may result in serious water damage and is not covered under the terms of the guarantee.

Step 6 - Correct Product Operation

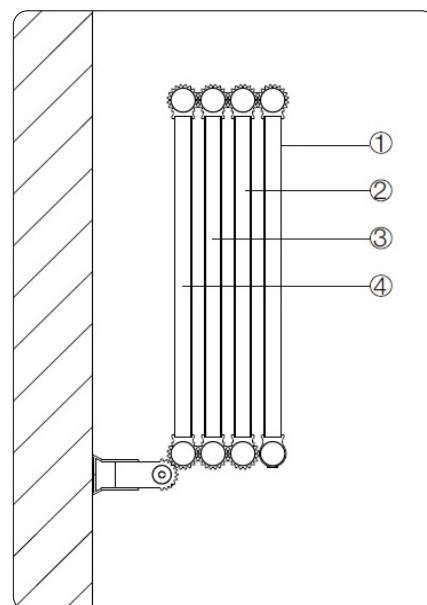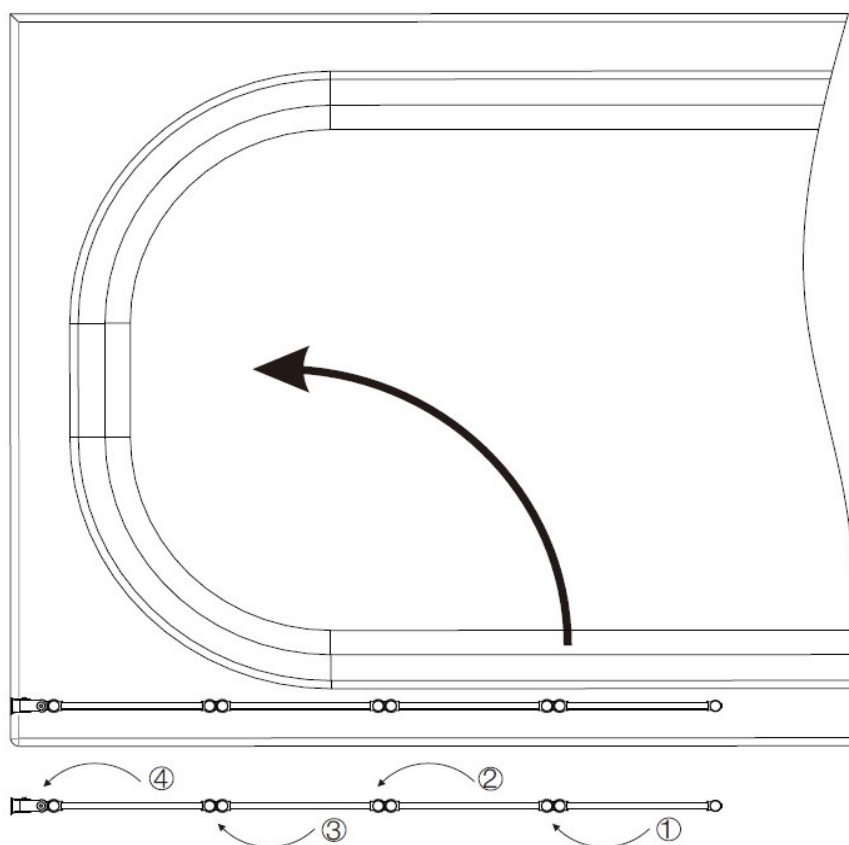

Trouble Shooting Guide

Should you experience any problems during installation please refer to the Trouble Shooting Guide or contact Customer Relations on:
+44 (0) 1325 328033

To enable customer relations to provide you with an excellent level of service it is important that you quote your product Code and Reference Number - these can be found on the Guarantee card.

Trouble Shooting Guide	
Problem	Solution
Product Leaking	1. Check the bath is sealed correctly along the tiled walls prior to installation. 2. Check that the inside gap between the bath and wall profiles has been sealed correctly. 3. Check the base of the enclosure is sealed on the outside only. 4. Check the wall profile on the tiled walls are vertically sealed on the outside only. 5. Check the gap between the wall profile and frame has been sealed 50mm vertically. 6. Check the seal have been fitted correctly. 7. Check to ensure the bath screen is situated on the inside edge of the bath. IMPORTANT: This enclosure should be water tested conforming to BS EN 14428.
Product Not Operating Correctly	1. Ensure that the wall profile is fully vertical. 2. Ensure that the bath is fully level. 3. Ensure that the cogs are clear from any debris and are coving freely allowing for correct operation as shown in step 6.
Enclosure Alignment on Bath	1. Ensure that the bath screen is fitted onto a tiled wall. 2. Ensure the bath screen is situated on the inside edge of the bath and parallel to the front of the bath. 3. Ensure that the wall profile is fully vertical.

Important Information to help you maintain your Product:

The following information is all you need to keep your product looking new:

- Our products are generally maintenance free, however it may be necessary to lubricate wheel assemblies and other moving parts such as hinges from time to time.
- Clean your product using a mild detergent diluted in water and then polished off using a soft cloth.
- If you live in a hard water area, periodically clean your product using a 50/50 solution of white vinegar and water. The solution should be left on the enclosure for approximately 5 minutes then rinsed off using warm water. This method of cleaning should remove lime scale residue.
- It is strongly recommended that a quality silicone spray is used.

A list of Don't's:

1. Don't use acidic based products which are unsuitable for cleaning enamel surfaces.
2. Don't use abrasive cleaners or cleaners using bleach or solvents, these products will adversely affect the finish of the aluminium profiles.
3. Don't use scouring pads, powder or any sharp instruments when cleaning the enclosure.