


# Curved Wetroom Panel

## Clear or Fluted Glass

### N2HASP#C# / N2HASP#FC#

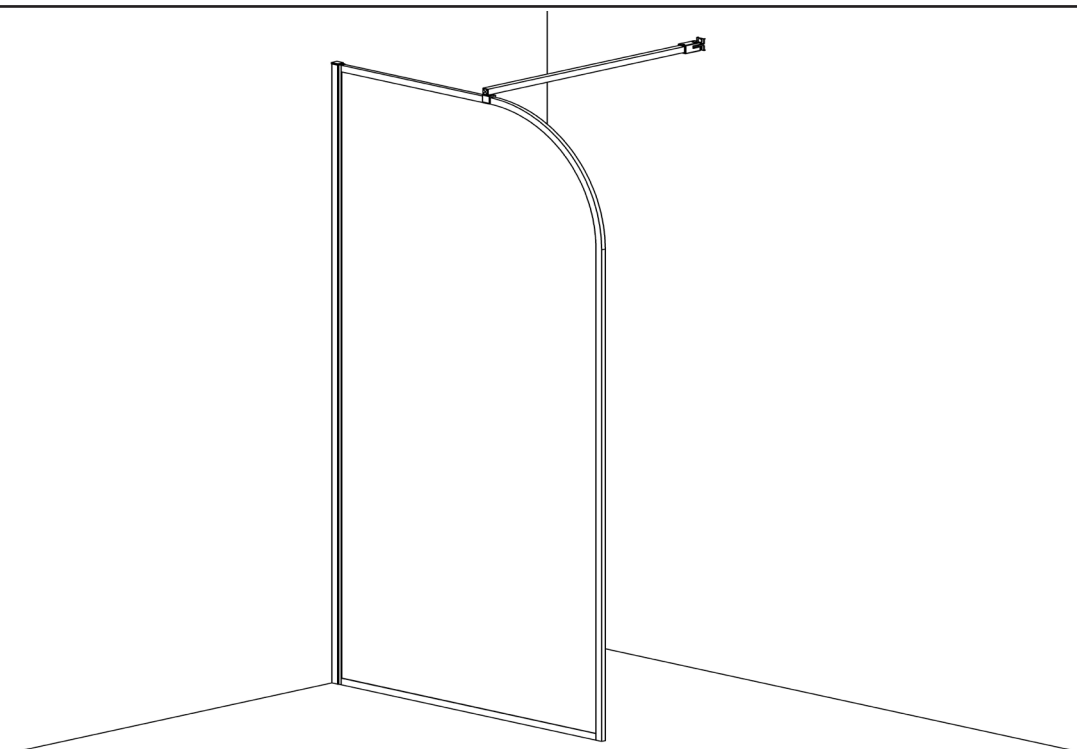

#### Handling

Be aware toughened glass can shatter if not handled correctly. It should not be subjected to any sharp impact and it is essential to protect the glass by resting it on a soft protective surface during installation such as cardboard or carpeting. It is recommended to wear PPE at all times during installation.



#### Pre-Installation Checks

1. Please take time to read these instructions prior to installing your product, including the Tray Sizes section below.
2. Check you have the correct product, by looking at the labels on the side of the product packaging.
3. Check all the product components and fixing kits are in the box - these are listed on the next page.
4. Please check the product for defects or damage, once the installation has commenced we cannot accept responsibility for any defects or damage.
5. Before you commence any drilling check there are no hidden electrical cables and/or water pipes.
6. No attempt should be made to re-work the toughened safety glass.
7. The installation of the product should be performed by two persons.
8. It is strongly recommended the product is fitted on a tiled surface or similar waterproof surface - which are tiled and grouted before product is installed.
9. It is strongly recommended that the walls the product is going to be installed on are vertical, and the floor/tray is level.
10. Pictures used are for illustration purposes only, product designs may alter slightly as a result of continuing product development.
11. We do not stipulate where the European Standard Kite Mark should be positioned on the glass when being factory assembled.
12. Please note that some natural misting may occur when you remove this product from its packaging, due to the addition of the glass protection pre-coating. If this does occur this can easily be removed with a soft, dry cloth.

#### Tray Sizes

Important: You **MUST** measure your tray before you proceed with installation. Please refer to the adjustment stated in the brochure or step 1 of this instruction manual for the adjustment details for this product. If your tray exceeds this given value, you may need a bespoke product. Your tray must be larger than the size given for corner adjustments.

Refer to Step 1 for a guide on how to measure your tray accurately before proceeding any further.

Roman will not be liable if you begin installation without correctly measuring your tray, to the realisation it doesn't fit.

#### Consumer Guarantee

Please make sure the purchaser/end user completes and returns the guarantee card which is enclosed with this product. Failure to validate the Guarantee will mean only the 1 Year Statutory Guarantee will apply.




PO Box 125, Whitworth Avenue,  
Aycliffe Business Park,  
Co Durham DL5 6WX

To obtain a copy of the Declaration of Performance for this product, please go to: [www.ce-dop.com](http://www.ce-dop.com), contact us on +44 (0) 1325 328034, or write to us at the above address, quoting the product reference number where possible.




REV01 - 03.2026

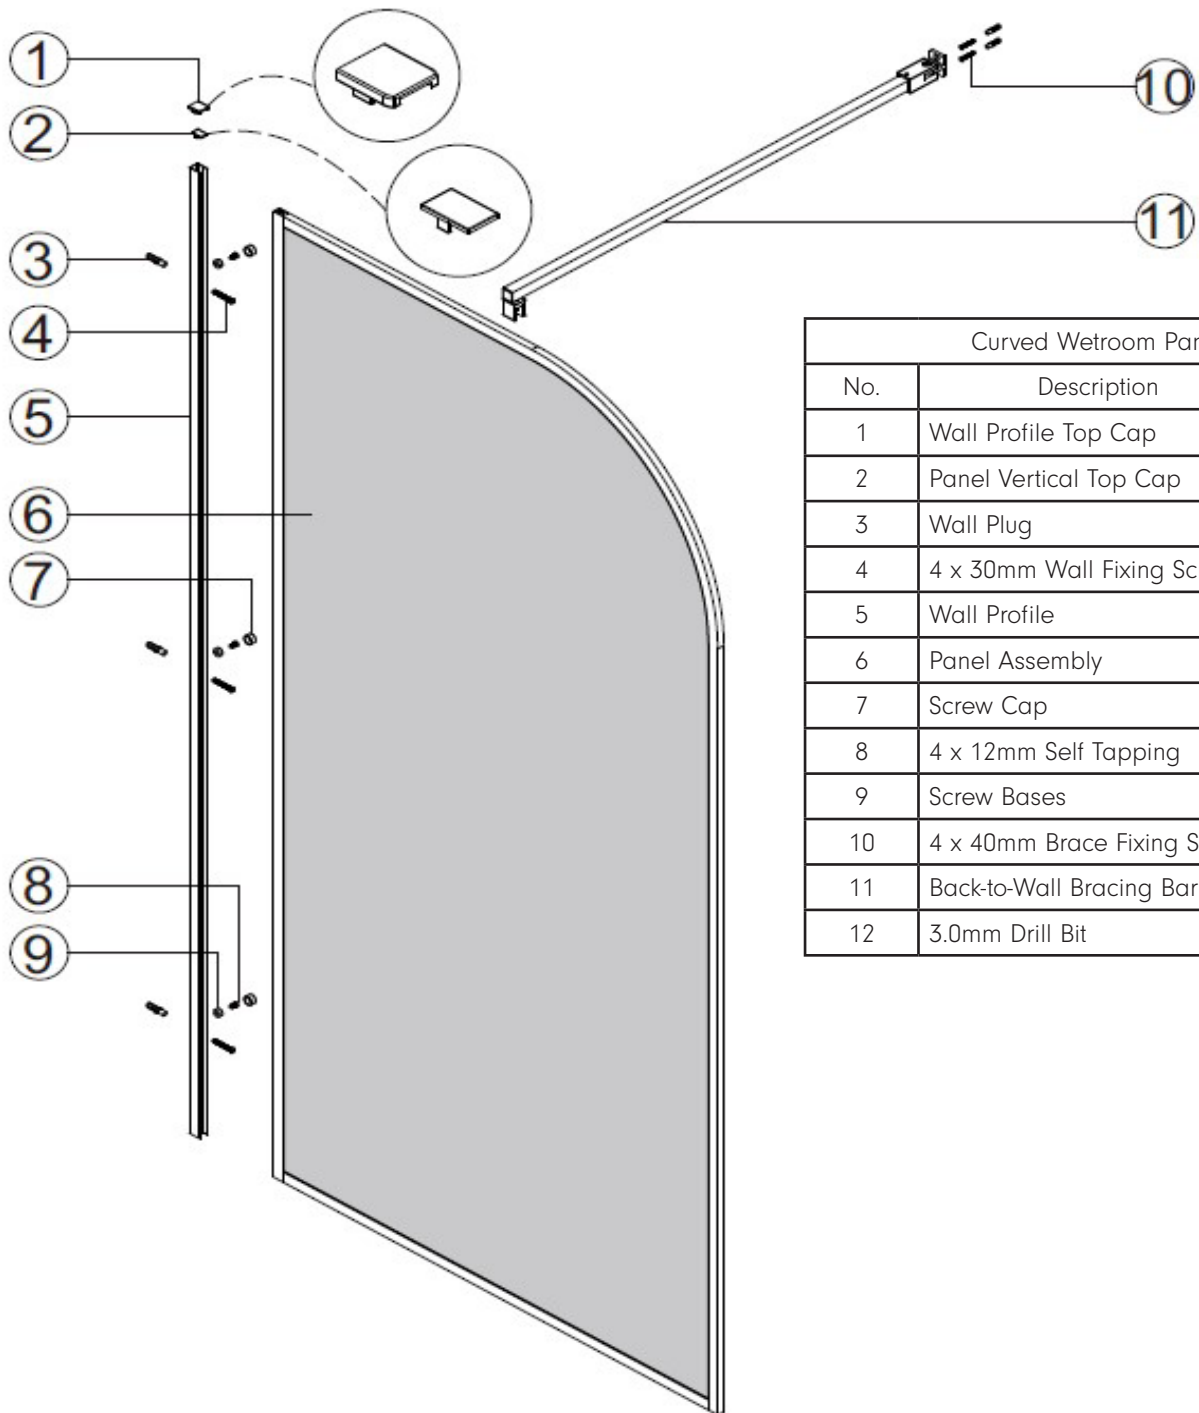


| Curved Wetroom Panel |                             |      |
|----------------------|-----------------------------|------|
| No.                  | Description                 | Qty. |
| 1                    | Wall Profile Top Cap        | 1    |
| 2                    | Panel Vertical Top Cap      | 1    |
| 3                    | Wall Plug                   | 5    |
| 4                    | 4 x 30mm Wall Fixing Screw  | 3    |
| 5                    | Wall Profile                | 1    |
| 6                    | Panel Assembly              | 1    |
| 7                    | Screw Cap                   | 3    |
| 8                    | 4 x 12mm Self Tapping       | 3    |
| 9                    | Screw Bases                 | 3    |
| 10                   | 4 x 40mm Brace Fixing Screw | 2    |
| 11                   | Back-to-Wall Bracing Bar    | 1    |
| 12                   | 3.0mm Drill Bit             | 1    |


### Equipment Checklist: Not Supplied

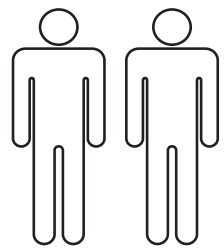






Two Person Fit

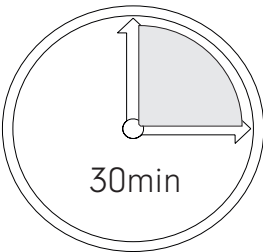

30min

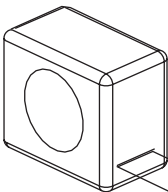

6.0mm

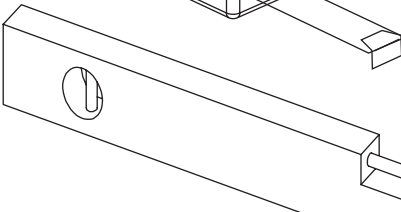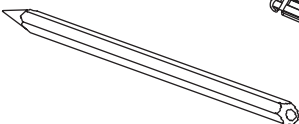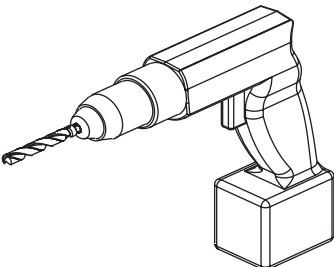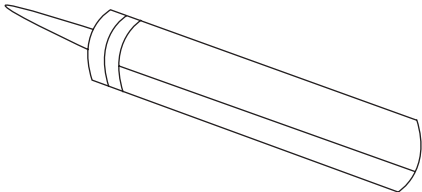



## Step 1 - Tray Sizes

As wetroom panels are more of an open alternative to a shower enclosure, they can be positioned in a corner or on a straight wall. They can be installed to a tray or straight down to a wetroom floor. Please ensure consideration has been taken regarding the tray/wetroom width and the size of the wetroom panel so that an adequate entry width to the shower area remains.





| Clear Glass Panel | Product Width   |
|-------------------|-----------------|
| N2HASP9C#         | 860mm - 870mm   |
| N2HASP10C#        | 960mm - 970mm   |
| N2HASP12C#        | 1160mm - 1170mm |

| Fluted Glass Panel | Product Width   |
|--------------------|-----------------|
| N2HASP9FC#L        | 860mm - 870mm   |
| N2HASP9FC#R        |                 |
| N2HASP10FC#L       | 960mm - 970mm   |
| N2HASP10FC#R       |                 |
| N2HASP12FC#L       | 1160mm - 1170mm |
| N2HASP12FC#R       |                 |

Fluted curved panels are handed as the fluted glass face needs to be fitted on the OUTSIDE with the curve on the OUTER edge of the panel.

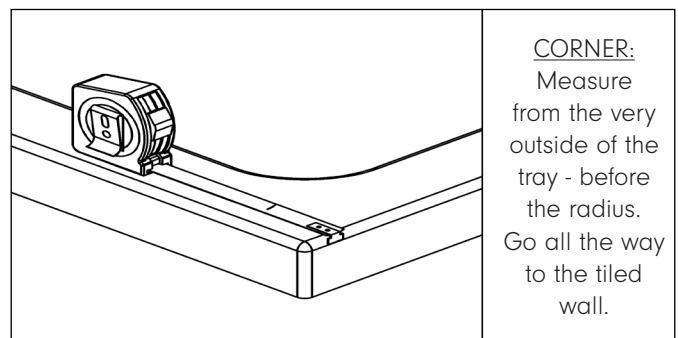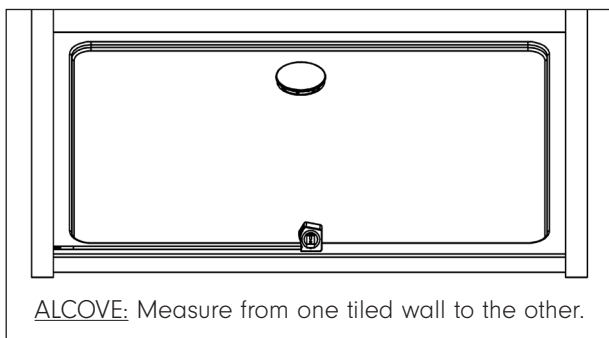






## Step 2 - Pre-Installation Checks

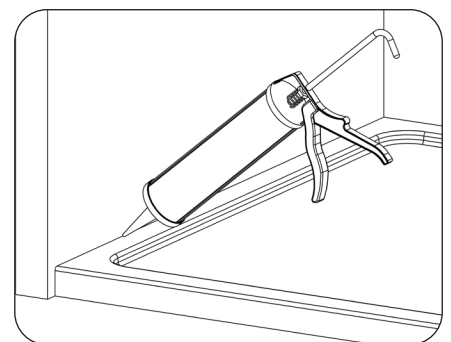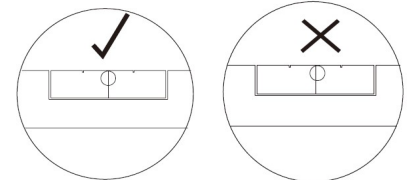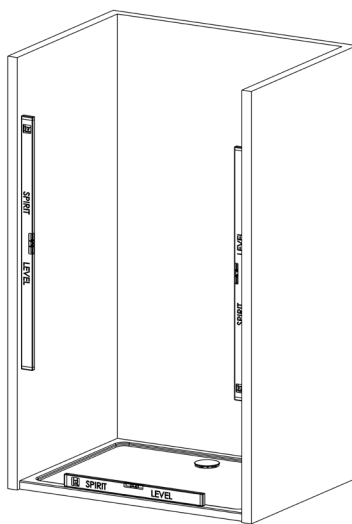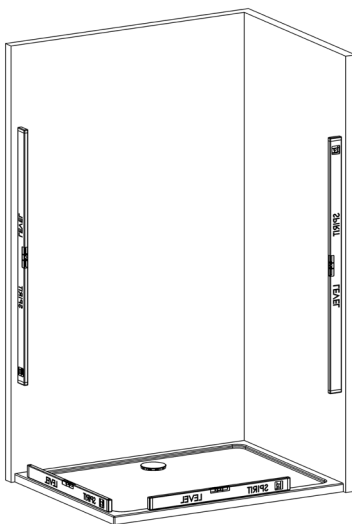

PLEASE NOTE: Applicable for both tray and wetroom scenarios.





1. Make sure the tray is installed as per the manufacturer's instructions.
2. Check your tray and walls are level on all sides (the bubble on the spirit level must be in the centre of the 2 lines).
3. Stand in the tray and check that there is no adverse movement (correct if necessary).
4. The walls should be tiled and grouted up to the tray.
5. The tiles and the tray should be sealed using a good quality bathroom sealant:
  - Spray the seal and joints with the shower head and check for leaks when the silicon has cured.
  - Check the plumbing for leaks.
  - DO NOT plasterboard over the tray.
  - DO NOT grout the tiles when the enclosure has been fitted, the grout may discolour the aluminium profiles.

### Step 3 - Marking & Fitting Fixings

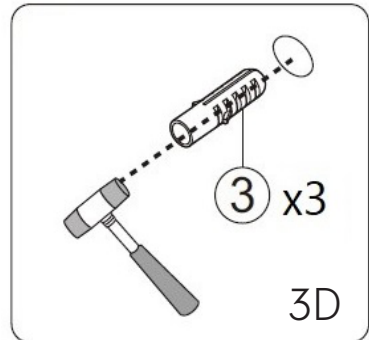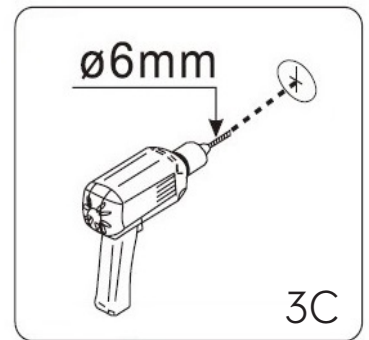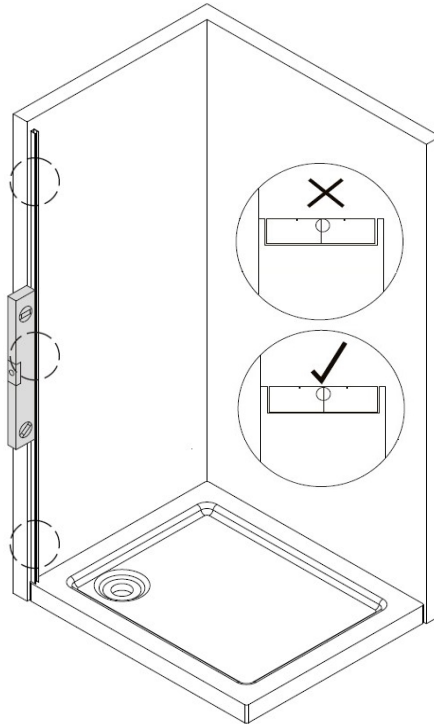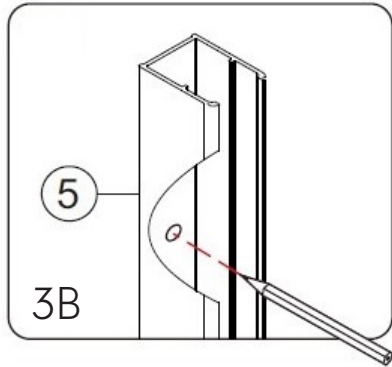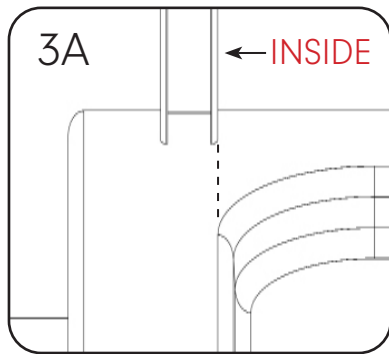







- A) If fitting on a tray, position the inside edge of your wall profile (5) in-line with the start of the inside curved edge of the tray.  
If fitting on a wetroom floor, position the wall profile (5) at the desired distance from the back wall.
- If fitting with a bracing bar, do not exceed 1040mm from the outside of the wall profile to the back wall.
- B) Mark the fixing positions through your wall profile (5).
- Please make sure your wall profile is fully plumb when marking the fixing positions.
- C) Drill the fixing positions with a 6mm drill bit (not supplied).
- D) Fit the wall plugs (3) into the drilled holes (3 per wall profile).

### Step 4 - Fitting Wall Profile & Panel

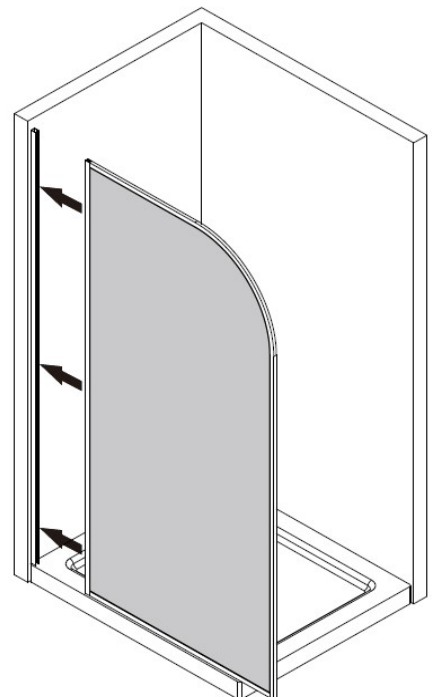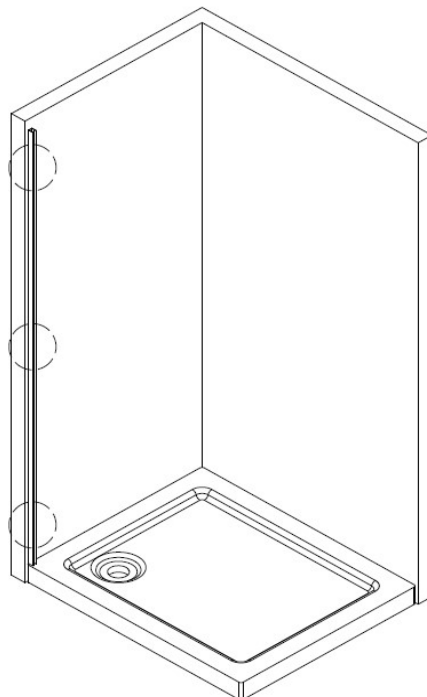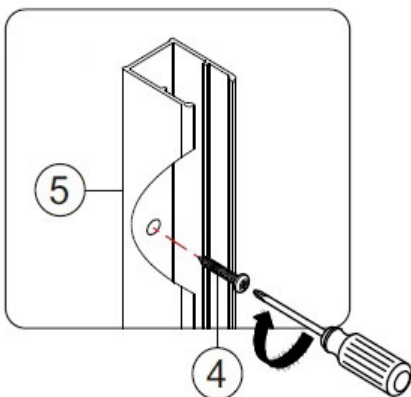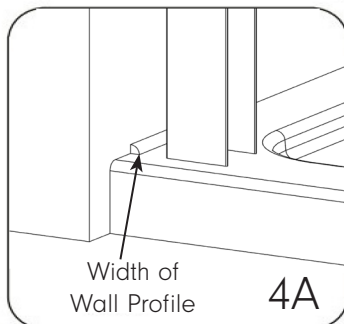

- A) Place a bead of bathroom sealant (not supplied) the width of the wall profile between the tiled wall and tray.
- **IMPORTANT:** Failure to carry out this stage can result in serious water damage and is not covered by the guarantee.
- B) Using the 30mm screws (4) secure the wall profile (5) to the wall. Do not over tighten the screws into the wall profile.
- Ensure the wall profile stays completely vertical throughout this procedure using a Spirit Level.
- C) Offer the panel assembly into your wall profile, ensuring it is fully supported on the floor/tray.
- If fitting a fluted panel, the fluted face should be on the outside.

### Step 5 - Pinning Panel

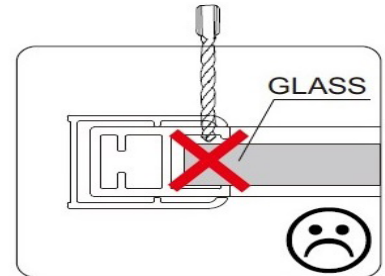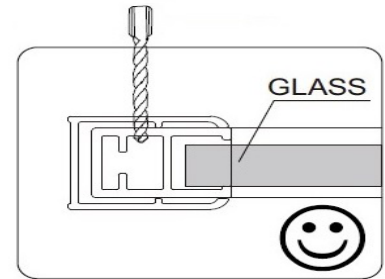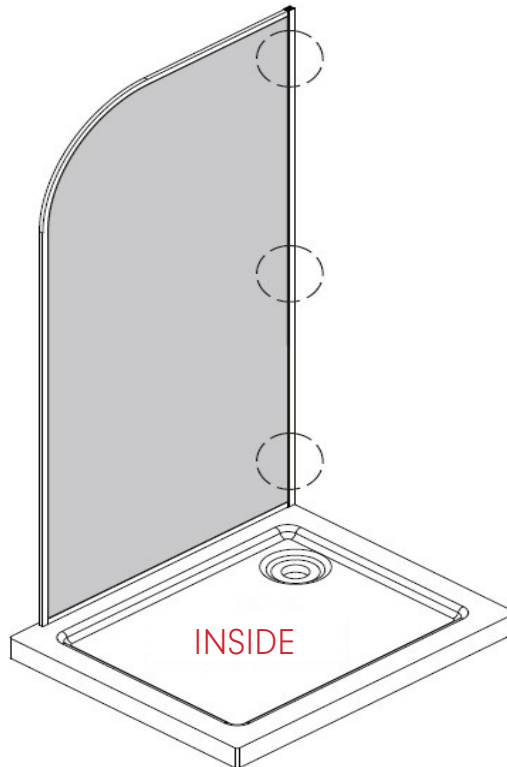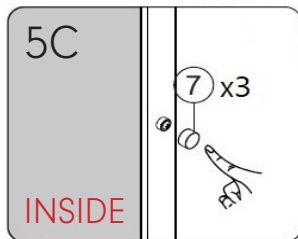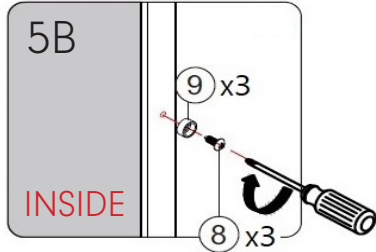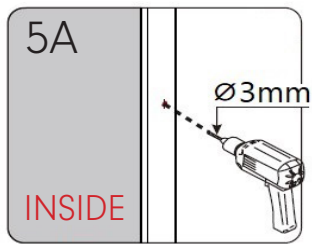





A) Using the supplied 3mm drill bit, drill through both layers of the aluminium profiles in the locations circled above.

- **IMPORTANT:** Take care as to not drill through the glass channel section of the aluminium.

B) Fit the screw bases (9) onto the 12mm self tapping screws (8) and pin the product through the drill holes.

C) Fit the screw cover caps (7) to the screw bases (9).

### Step 6 - Fitting Panel Top Caps

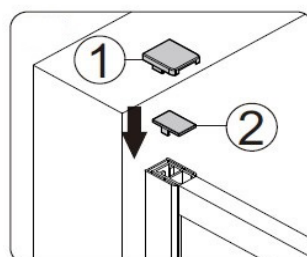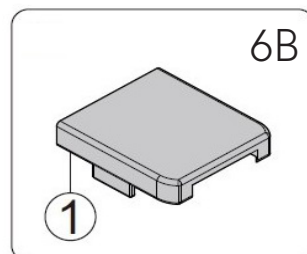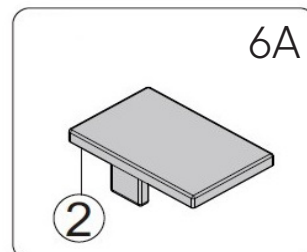
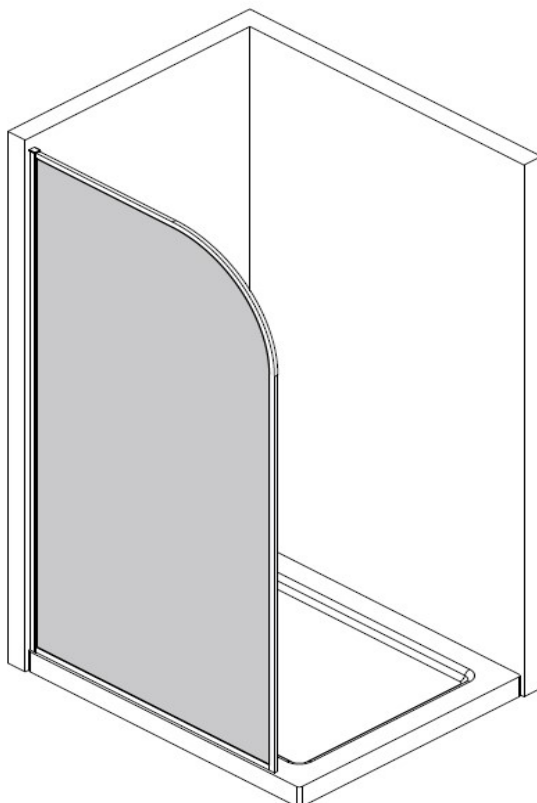


A) Take the panel vertical top cap (2) and fit it on top of the panel vertical profile.



B) With the vertical top cap in place (2), take the wall profile top cap and fit it on top of the wall profile (5).

## Step 7 - Installing Bracing Bar


7A

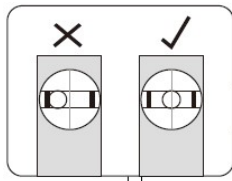


7B Shorten This End of Bar

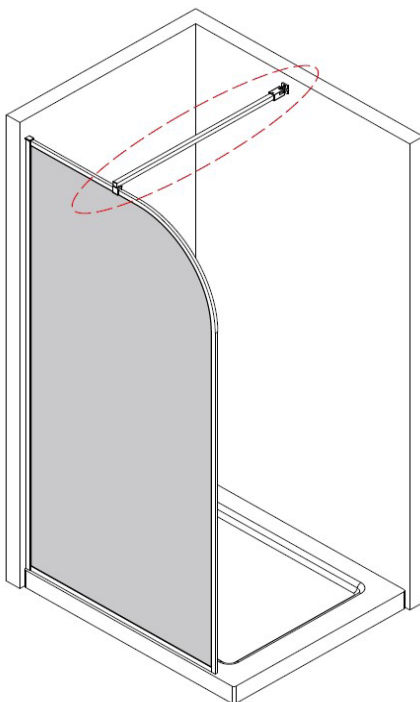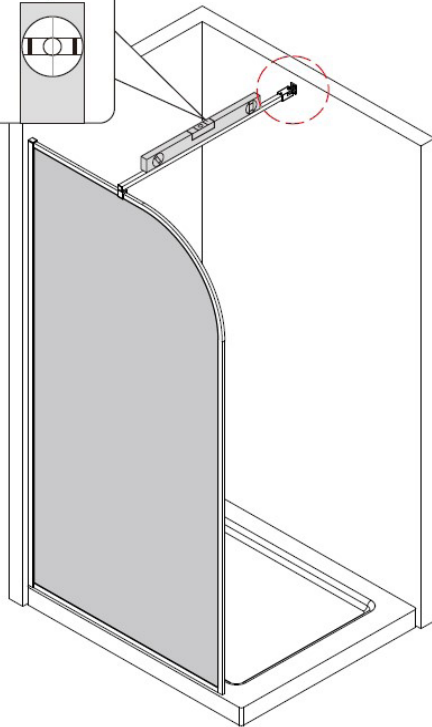


7C

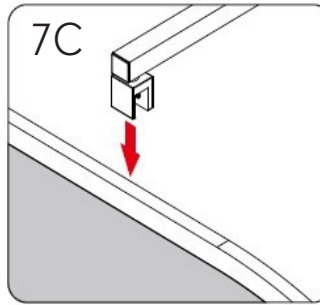


7C

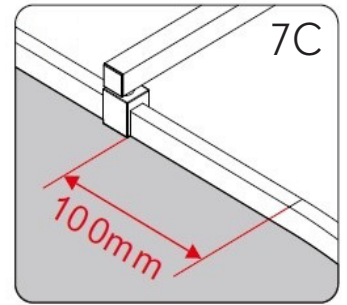


7D

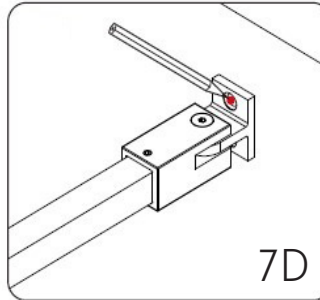


7E

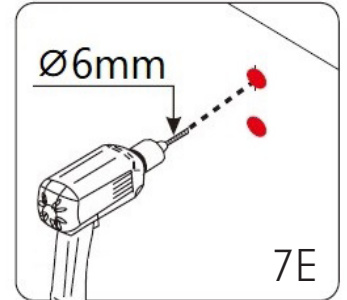


7E

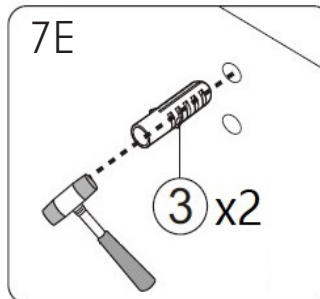


7F

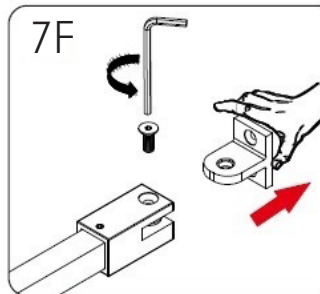


7G

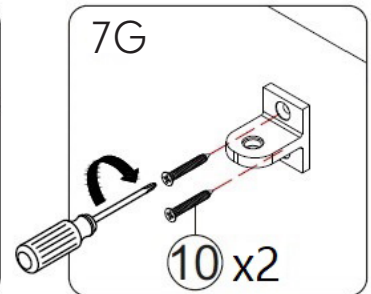

7H

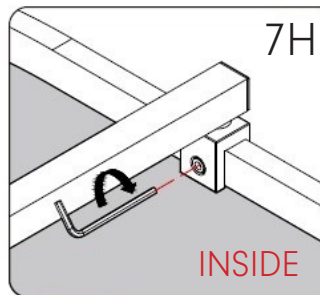


7H

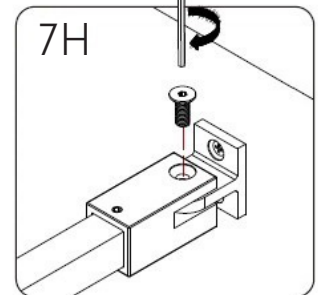

- Measure from the wall to the outside face of the panel frame, deduct this from 1042.5mm to calculate the amount the bracing needs to be shortened by to suit the fitted position.
- Remove the wall cup from the bracing bar assembly (11) and shorten the bar at the wall cup end by the calculated amount and reassemble.
- Position the bracing bar on top of the panel 100mm in from the start of the curved edge.
- Mark the two fixing locations through the wall bracket holes and remove the bracing from on top of the panel assembly.
  - Ensure that the bracing bar remains level throughout the fixing hole marking process.
- Drill the wall in the two marked locations using a 6mm drill bit (not supplied) and fit the wall plugs (3).
- Remove the wall bracket from the brace bar assembly.
- Using the 40mm brace fixing screws (10), fix the wall bracket to the wall.
- Re-position the bracing bar on the panel assembly. Tighten the clamp grub screw & secure the brace to the fixed wall cup.
  - Ensure all gaskets are fitted and all screws are tightened so that the bracing bar is solid.

## Step 8 - Product Sealing

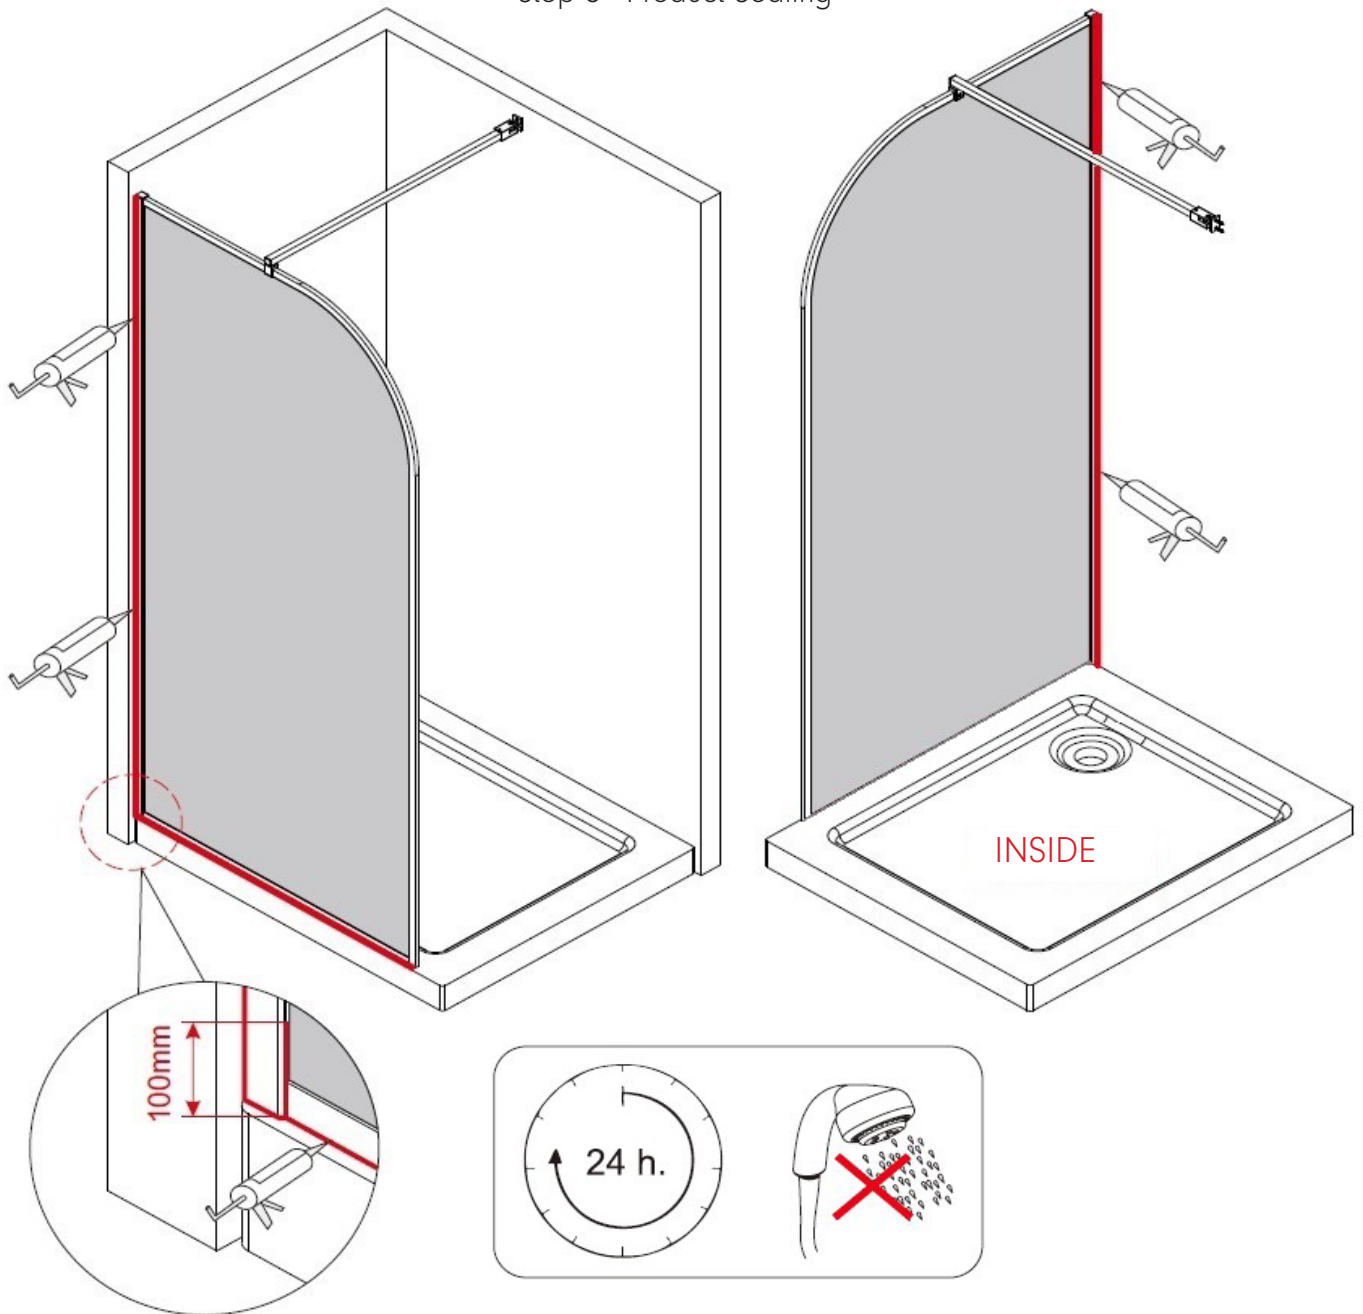

- A) Using a good quality sealant, seal both sides of the wall profiles vertically inside and outside where it meets the tiled wall.
- B) Fully seal the bottom of the panel assembly to the tray/floor on the outside only.
- C) Seal 100mm vertically between the frame and the wall profile on the outside only.
- DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING.
  - IMPORTANT: Failure to carry out stages A, B & C may result in serious water damage and is not covered under the terms of the guarantee.

# Trouble Shooting Guide

Should you experience any problems during installation please refer to the Trouble Shooting Guide or contact Customer Relations on:  
+44 (0) 1325 328033

To enable customer relations to provide you with an excellent level of service it is important that you quote your product Code and Reference Number - these can be found on the Guarantee card.

| Trouble Shooting Guide      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Problem                     | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Product Leaking             | <ol style="list-style-type: none"><li>1. Check that the inside gap between the tray and wall profile has been sealed correctly.</li><li>2. Ensure the tray is sealed along the tiled walls prior to installation.</li><li>3. Ensure the joint between the panel and tray top is sealed.</li><li>4. If the inside joint between the enclosure and the tray top is sealed, this will cause leakage - sealant must be removed.</li><li>5. Ensure the panel profile on the tiled walls is sealed vertically on both the inside and outside.</li></ol> <p><b>IMPORTANT: This enclosure should be water tested conforming to BS EN 14428.</b></p> |
| Panel Alignment             | <ol style="list-style-type: none"><li>1. Ensure the tray is completely level.</li><li>2. Check the bracing is fitted correctly and fully tightened.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Enclosure Alignment on Tray | <ol style="list-style-type: none"><li>1. Have you read and understood Step 1 of the instructions?</li><li>2. Is the enclosure fitted onto a tiled wall?</li><li>3. Are the Wall Profiles completely vertical?</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                     |

## Important Information to help you maintain your Product:

The following information is all you need to keep your product looking new:

- Our products are generally maintenance free, however it may be necessary to lubricate wheel assemblies and other moving parts such as hinges from time to time.
- Clean your product using a mild detergent diluted in water and then polished off using a soft cloth.
- If you live in a hard water area, periodically clean your product using a 50/50 solution of white vinegar and water. The solution should be left on the enclosure for approximately 5 minutes then rinsed off using warm water. This method of cleaning should remove lime scale residue.
- It is strongly recommended that a quality silicone spray is used.

## A list of Don't's:

1. Don't use acidic based products which are unsuitable for cleaning enamel surfaces.
2. Don't use abrasive cleaners or cleaners using bleach or solvents, these products will adversely affect the finish of the aluminium profiles.
3. Don't use scouring pads, powder or any sharp instruments when cleaning the enclosure.